ASSEMBLY INSTRUCTION

Thank Sou

FOR CHOOSING FELTON INDUSTRIES

IN-GROUND BUDDY BENCH **WITH BACKREST** [Code No: FELIGB2-BB]



"This product has been manufactured in Australia to the highest quality standard, guaranteeing proven quality, durability and low maintenance" AUSTRALIAN MADE



1800 22 00 55

1800 05 91 58

sales@felton.net.au

www.felton.net.au




Felton Industries Pty Ltd | ABN: 17 130 687 240





WARNING: This assembly required two or more people as lifting is involved. Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly


ITEM	DESCRIPTION	Qty
1	FELIGLS_IN-GROUND BACKREST LEG SUPPORT	2
2	FEL-BB_BUDDY SEAT PLANK L2000	1
3	FEL-BB_BUDDY BACKREST PLANK L2000	1
4	FEL-BB_BUDDY ARMREST	2
5	AS-NZS 2465 Bolt - 1/4" x 1"	20
6	AS-NZS NYLON Nut - 1/4"	20




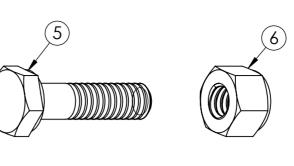


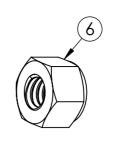

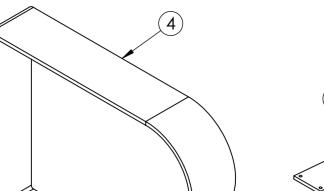

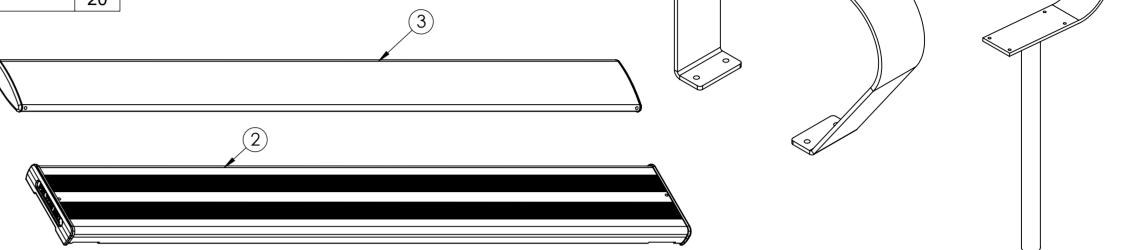


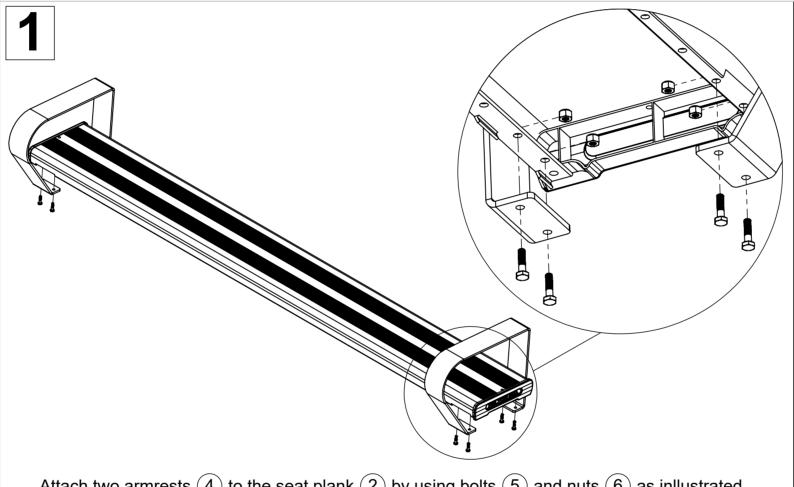

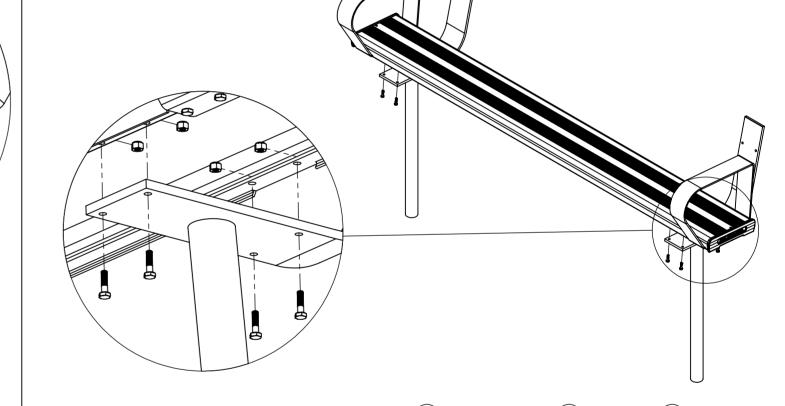

Attach two armrests (4) to the seat plank (2) by using bolts (5) and nuts (6) as inllustrated.

Attach the assembly in step 1 to two leg supports (1) by using bolts (5) and nuts (6) as inllustrated.

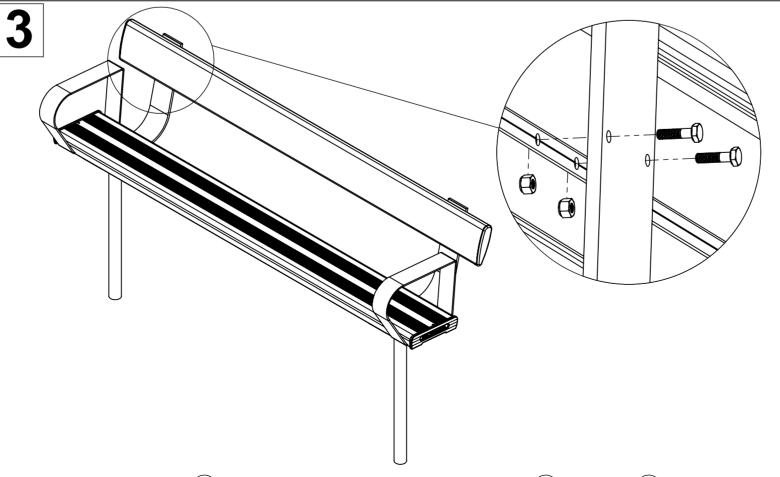

GROUND **GROUND** 300 EMBED POST 300mm INTO CONCRETE FOOTING 300

Attach the backrest plank (3) to the assembly in step 2 by using bolts (5) and nuts (6) as inllustrated.

Tighten all hexagonal head bolts with spanners and appropriate tools. Then embed the structure min.300mm to the ground. Refer to "specification drawing" for detailed engineering requirement.