ASSEMBLY INSTRUCTION

Thank Jou

FOR CHOOSING FELTON INDUSTRIES

IN-GROUND BENCH SEAT WITH BACKREST 2mtr [Code No: FELIGB2]



"This product has been manufactured in Australia to the highest quality standard, guaranteeing proven quality, durability and low maintenance" AUSTRALIAN MADE



1800 22 00 55

1800 05 91 58

sales@felton.net.au

www.felton.net.au





Felton Industries Pty Ltd | ABN: 17 130 687 240




WARNING: This assembly required two or more people as lifting is involved. Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly

•		
DESCRIPTION	Qty	
FELIGLS_IN-GROUND BACKREST LEG SUPPORT	3	
FELIGB2_SEAT PLANK L2000	1	
FELIGB2_BACKREST PLANK L2000	1	
AS-NZS 2465 Bolt - 1/4" x 1"	12	
AS-NZS NYLON Nut - 1/4"	12	
	FELIGLS_IN-GROUND BACKREST LEG SUPPORT FELIGB2_SEAT PLANK L2000 FELIGB2_BACKREST PLANK L2000 AS-NZS 2465 Bolt - 1/4" x 1"	FELIGLS_IN-GROUND BACKREST LEG SUPPORT 3 FELIGB2_SEAT PLANK L2000 1 FELIGB2_BACKREST PLANK L2000 1 AS-NZS 2465 Bolt - 1/4" x 1" 12

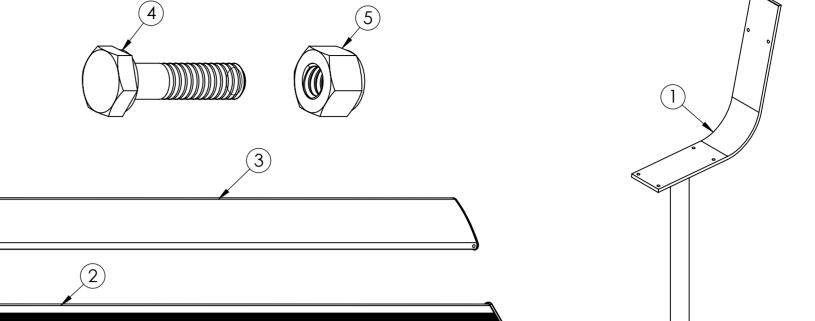


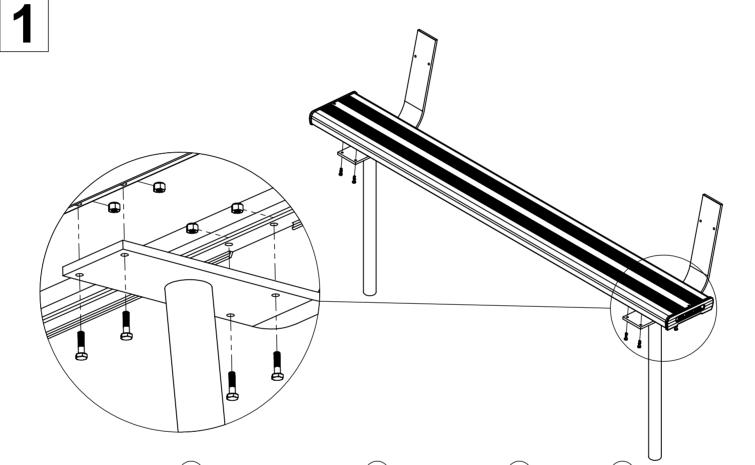

Attach the seat plank (2) to tow leg supports (1) by using bolts (4) and nuts (5) as inllustrated.

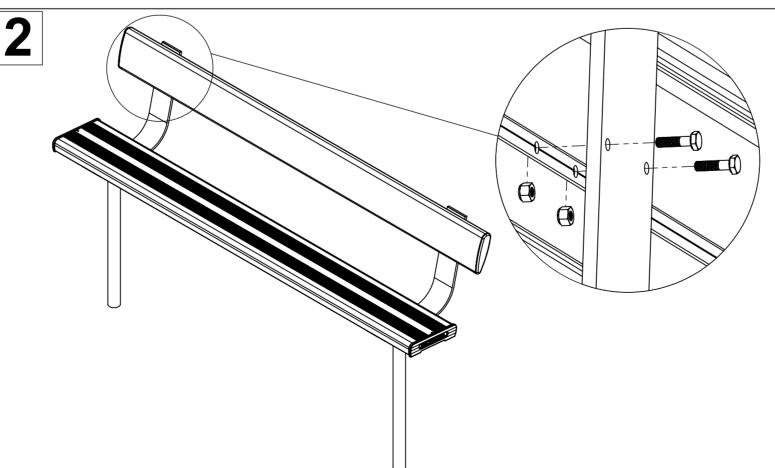

Attach the backrest plank (3) to the assembly in step 1 by using bolts (4) and nuts (5) as inllustrated.

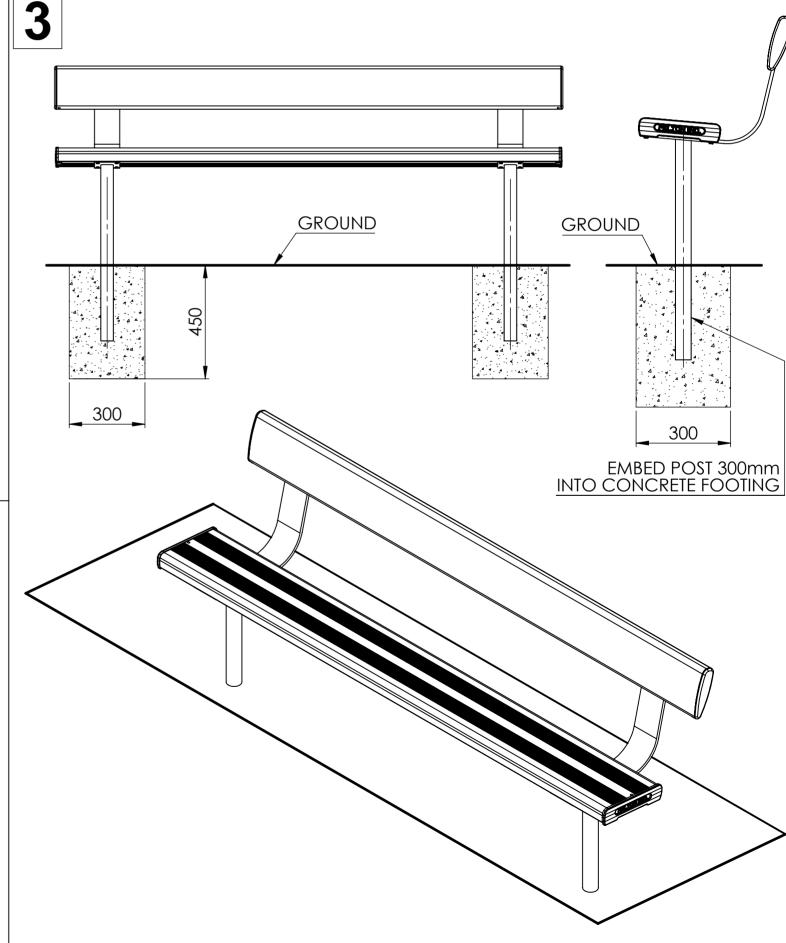

Tighten all hexagonal head bolts with spanners and appropriate tools. Then embed the structure min.300mm to the ground. Refer to "specification drawing" for detailed engineering requirement.

Page 1 of 1