ASSEMBLY INSTRUCTION

Thank You

FOR CHOOSING FELTON INDUSTRIES


STANDARD PARK SETTING WITH BACK REST [Code No: FELPSBR]




"This product has been manufactured in Australia to the highest quality standard, guaranteeing proven quality, durability and low maintenance"















Felton Industries Pty Ltd | ABN: 17 130 687 240




WARNING: This assembly required two or more people as lifting is involved. Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in

ITEM DESCRIPTION	
1 FELPSBR_MAIN FRAME 2	
3 FELPSBR_SEAT PLANK L1800 2 4 FELPSBR_BACKREST PLANK L1800 2 5 AS-NZS 2465 Bolt - 1/4" x 1" 48 6 AS-NZS NYLON Nut - 1/4" 48	
4 FELPSBR_BACKREST PLANK L1800 2 5 AS-NZS 2465 Bolt - 1/4" x 1" 48 6 AS-NZS NYLON Nut - 1/4" 48	
5 AS-NZS 2465 Bolt - 1/4" x 1" 48 6 AS-NZS NYLON Nut - 1/4" 48 48	
6 AS-NZS NYLON Nut - 1/4" 48 48	
	- 10-7
	•
	9
	\$ 1
Attach three table planks 2 to two base frames 1 by using bolts 5 and nuts 6 Attach two seat planks 3 (with notch cut beneath) onto fixing p	plates by using bolts 5 and
as illustrated. Note that all fixing lugs on base frames 1 face inwards. nuts 6 as illustrated.	
3	
	1 /2 //
	H

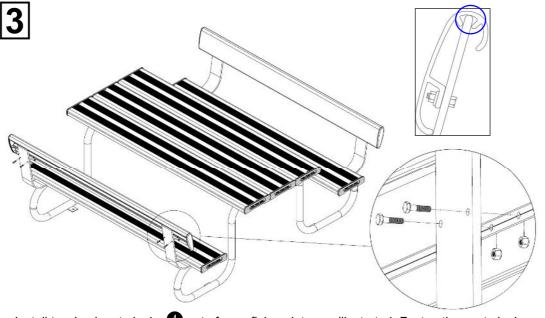



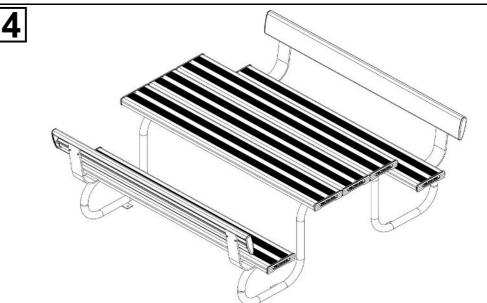

Tighten all hexagonal head bolts with spanners and appropriate tools. Then attach the whole assembly to the ground by using M12 dyna-bolts preferably, on each frame lug.