

ASSEMBLY INSTRUCTION

Thank You

FOR CHOOSING FELTON INDUSTRIES

STANDARD WHEELCHAIR SETTING
[Code No: FELSWS]



"This product has been
manufactured in Australia to the
highest quality standard,
guaranteeing proven quality,
durability and low maintenance"



1800 22 00 55

1800 05 91 58

sales@felton.net.au

www.felton.net.au




Felton Industries Pty Ltd | ABN: 17 130 687 240




WARNING: This assembly required two or more people as lifting is involved. **Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components.** Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly

ITEM	DESCRIPTION	Qty
1	FELSWS_MAIN FRAME	2
2	FELSWS_PLANK L2000	4
3	AS-NZS 2465 Bolt - 1/4" x 1"	32
4	AS-NZS NYLON Nut - 1/4"	32

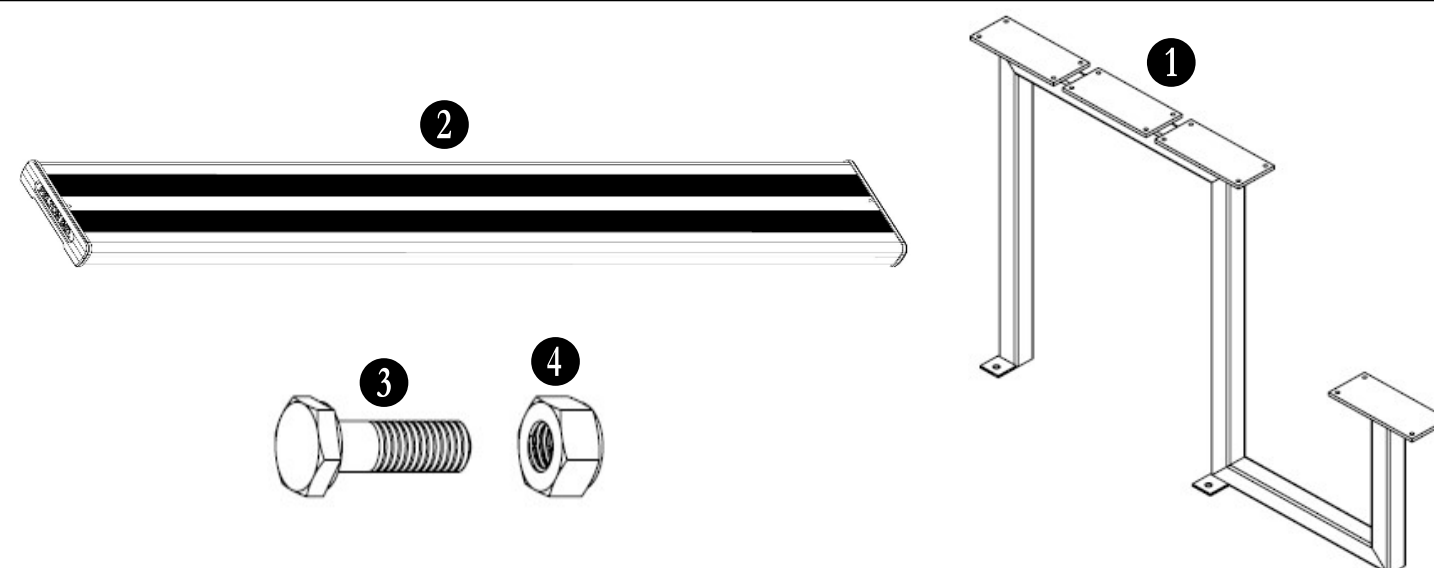


1

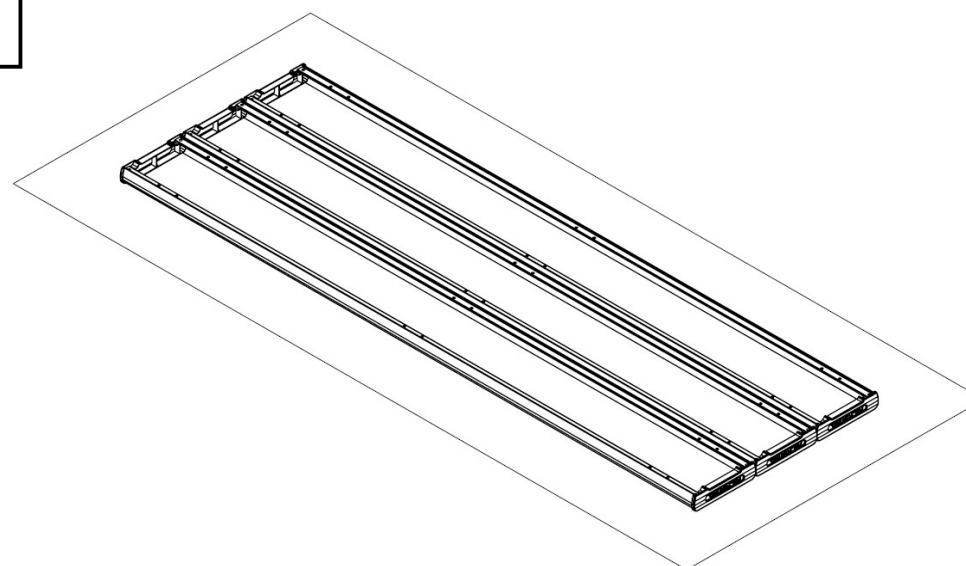


Place three planks 2 upside down and close together on the ground as illustrated.

2

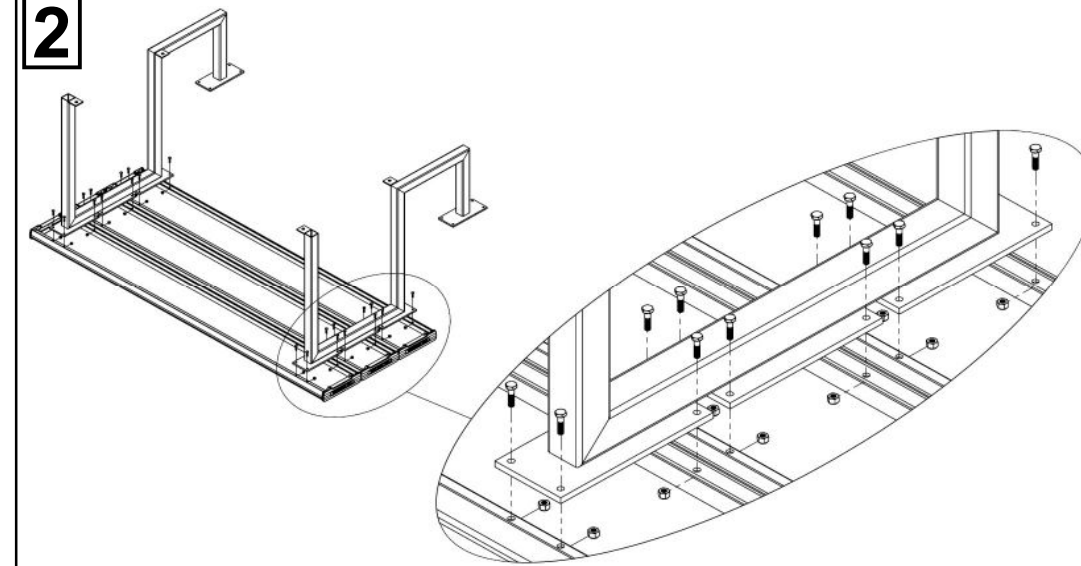


Attach two main frames 1 to three planks 2 in step 1 by using bolts 3 and nuts 4 as illustrated. **Note that all fixing lugs on base frames 1 face inwards.**

3

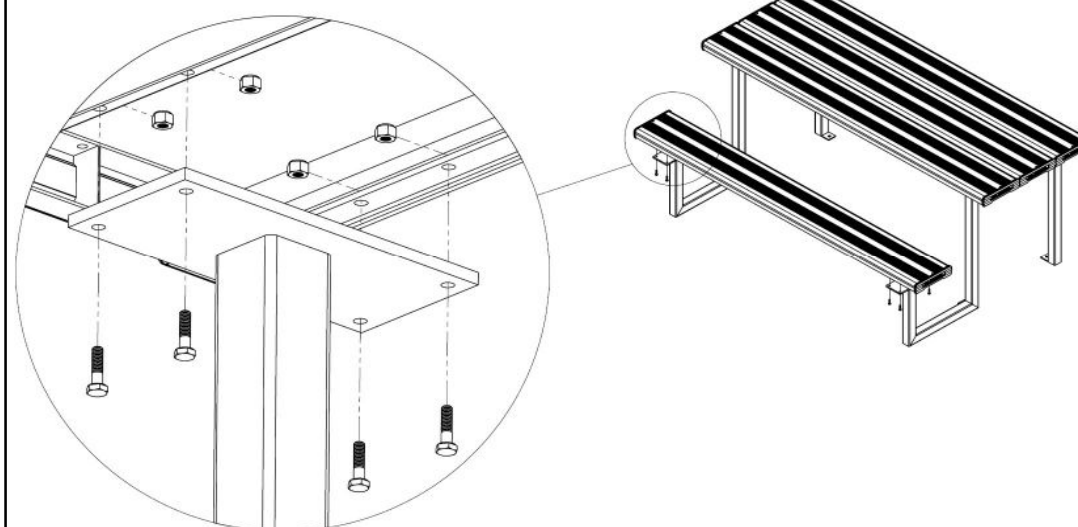

Turn the assembly in step 2 up, then attach one remaining plank 2 onto fixing plates by using bolts 3 and nuts 4 as illustrated.

4

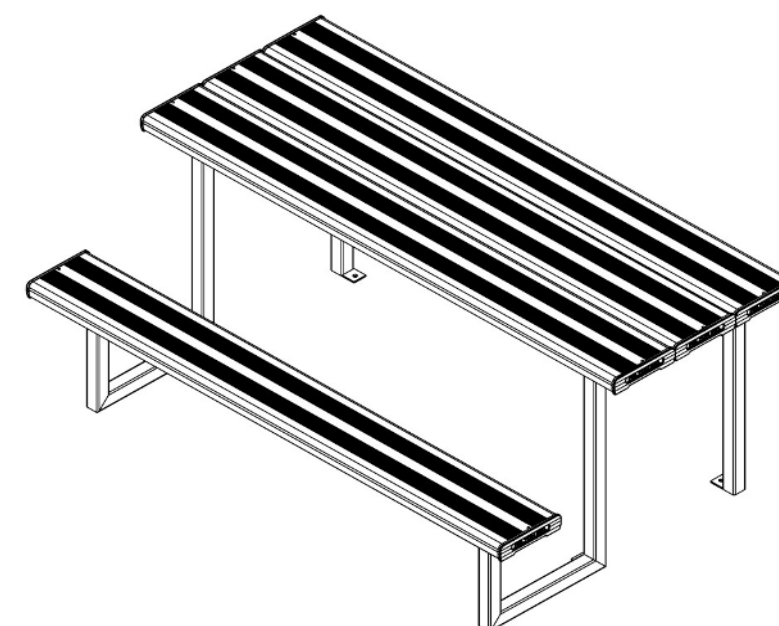

Tighten all hexagonal head bolts with spanners and appropriate tools. Then attach the whole assembly to the ground by using M12 dyna-bolts preferably, on each frame lug.