ASSEMBLY INSTRUCTION

Thank Jou

FOR CHOOSING FELTON INDUSTRIES

FREE STANDING BACKREST **BENCH SEAT 4mtr** [Code No: PSFSB4]



"This product has been manufactured in Australia to the highest quality standard, guaranteeing proven quality, durability and low maintenance" AUSTRALIAN MADE



1800 22 00 55

1800 05 91 58

sales@felton.net.au www.felton.net.au





Felton Industries Pty Ltd | ABN: 17 130 687 240




WARNING: This assembly required two or more people as lifting is involved. Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly

	•		
ITEM	DESCRIPTION	Qty	
1	PSFSBLS_ FREE STANDING BACKREST LEG SUPPORT	3	
2	PSFSB4_SEAT PLANK L4000	1	
3	PSFSB4_BACKREST PLANK L4000	1	
4	AS-NZS 2465 Bolt - 1/4" x 1"	18	
5	AS-NZS NYLON Nut - 1/4"	18	

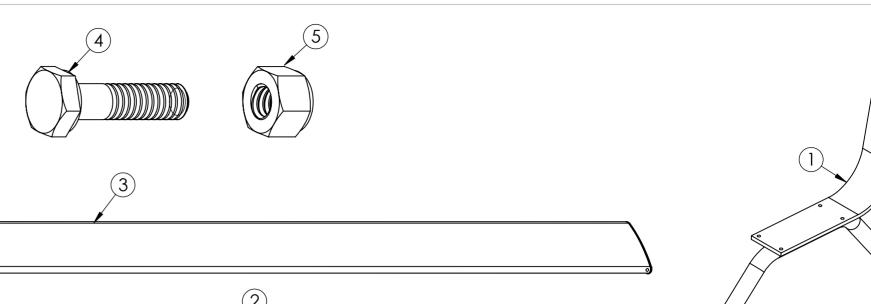


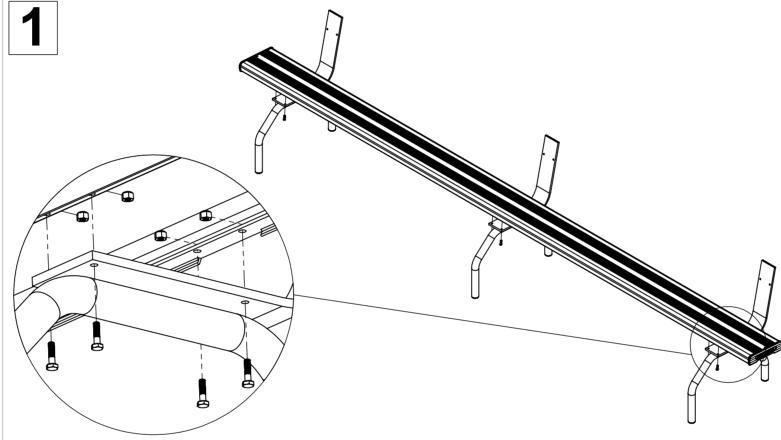



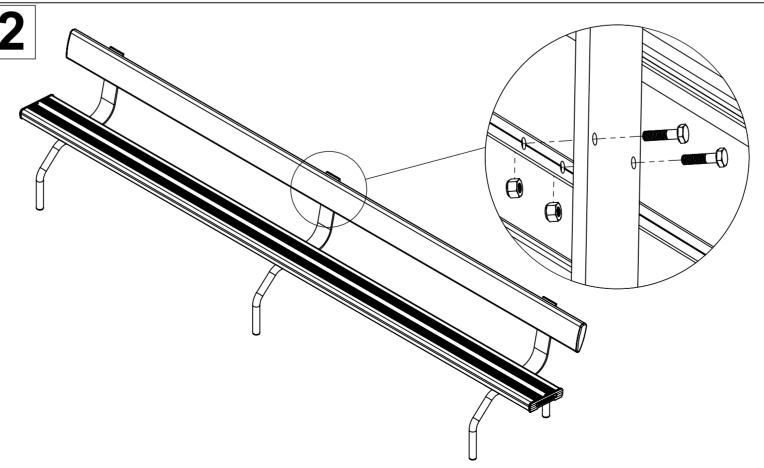

Attach the backrest plank (3) to the assembly in step 1 by using bolts (4) and nuts (5) as inllustrated.

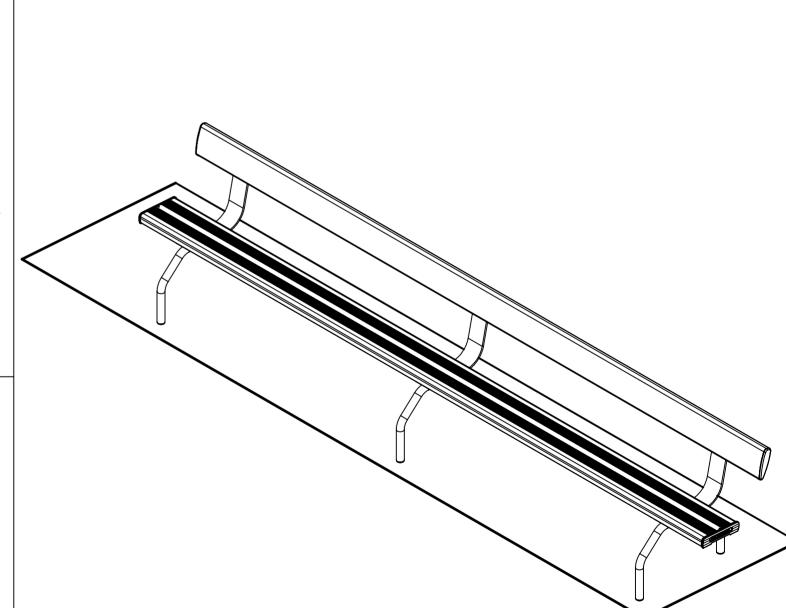

Tighten all hexagonal head bolts with spanners and appropriate tools. Then attach the whole assembly to the ground by using M12 dyna-bolts preferably, on each frame lug.