ASSEMBLY INSTRUCTION

Thank Jou


FOR CHOOSING FELTON INDUSTRIES

BURBUNG BIRRANG BENCH SEAT [Code No: TRRBS]



WARNING: This assembly required two or more people as lifting is involved. Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly

ac co. I loade direct all compension		
ITEM	DESCRIPTION	Qty
1	TRRBS_FRAME BRACKET BOTTOM	2
2	TRRBS_FRAME BRACKET TOP	2
3	TRRBS_SEATING BRACKET	2
4	TRRBS_STRAP	1
5	TRRBS_SEATING PLANK	2
6	BUTTON SCREW_ISO 7380 - M8 x 20	16
7	AS-NZS 2465 Bolt - 0.25in x 0.5in	24
8	AS-NZS Nut - 0.25in	24

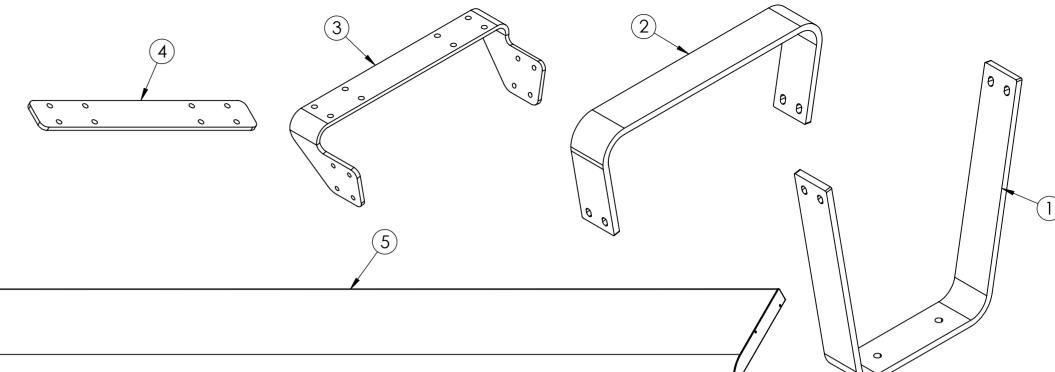



"This product has been manufactured in Australia to the highest quality standard, guaranteeing proven quality, durability and low maintenance" AUSTRALIAN MADE



1800 22 00 55


1800 05 91 58


sales@felton.net.au


www.felton.net.au




Felton Industries Pty Ltd | ABN: 17 130 687 240

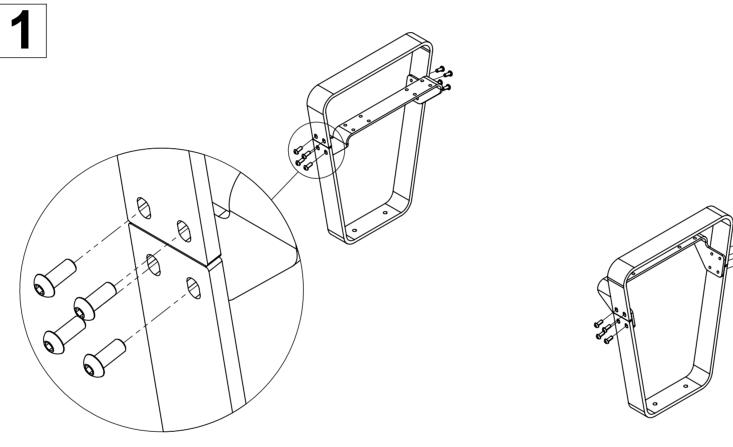

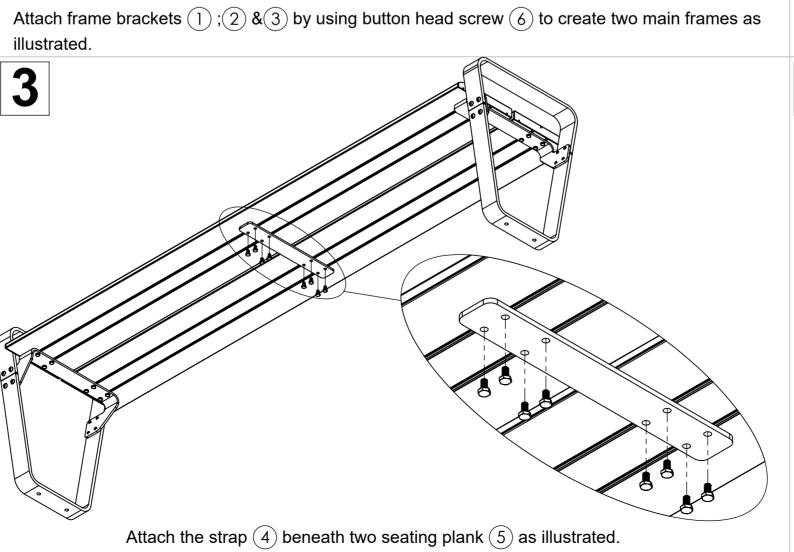

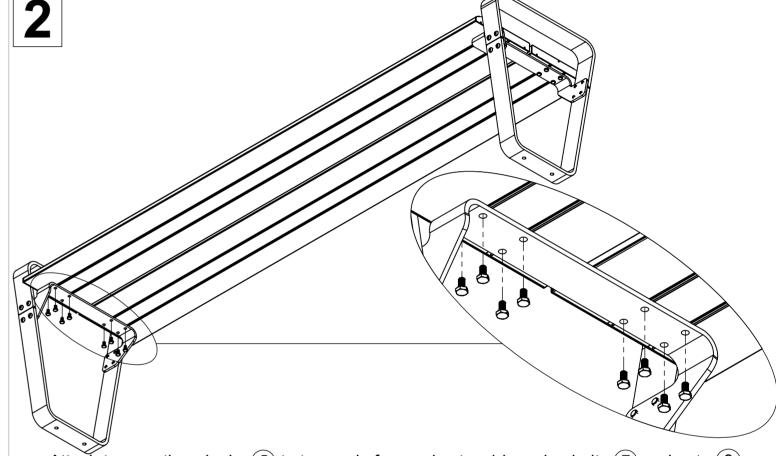

Attach two seating planks (5) to two main frames in step 1 by using bolts (7) and nuts (8) as illustrated.

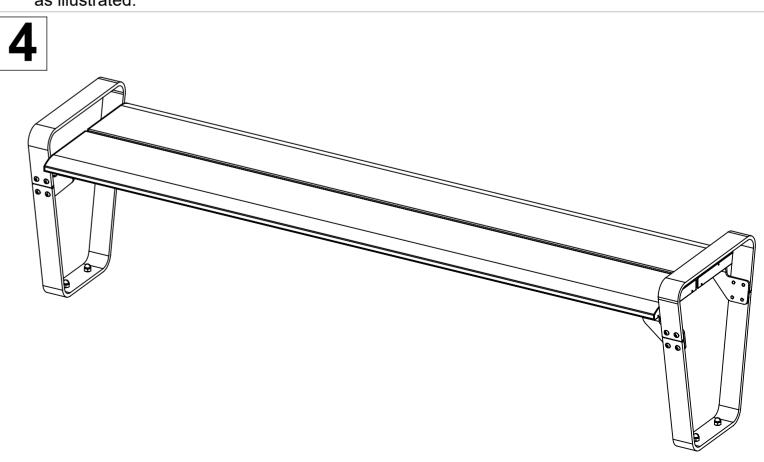

Attach the whole assembly to the ground by using M10 dyna-bolts preferably, on each side frame.

Page 1 of 1