

ASSEMBLY INSTRUCTION

Thank You

FOR CHOOSING FELTON INDUSTRIES

3 TIER 2mtr DOUBLE PLANK WITH
BACKREST SPECTATOR SEATING
[Code No: 3TGS1]



"This product has been
manufactured in Australia to the
highest quality standard,
guaranteeing proven quality,
durability and low maintenance"



1800 22 00 55

1800 05 91 58

sales@felton.net.au

www.felton.net.au



felton
INDUSTRIES

Felton Industries Pty Ltd | ABN: 17 130 687 240




WARNING: This assembly required two or more people as lifting is involved. **Please ensure bolts and nuts are only finger-tightened throughout assembly for flexibility in lining up components.** Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly


ITEM	DESCRIPTION	Qty
1	3 TIER BACKREST BASE FRAME	2
2	CUT-OUT SEAT PLANK L2000	1
3	TIER PLANK L2000	5
4	BACKREST PLANK L2000	1
5	AL FLAT BAR 80x6xL2000	1
6	AS-NZS 2465 Bolt - 1/4" x 1"	52
7	AS-NZS NYLON Nut - 1/4"	52
8	AS 1112 Bolt - 3/8" x 1"	2
9	AS 1112 Nut - 3/8"	2

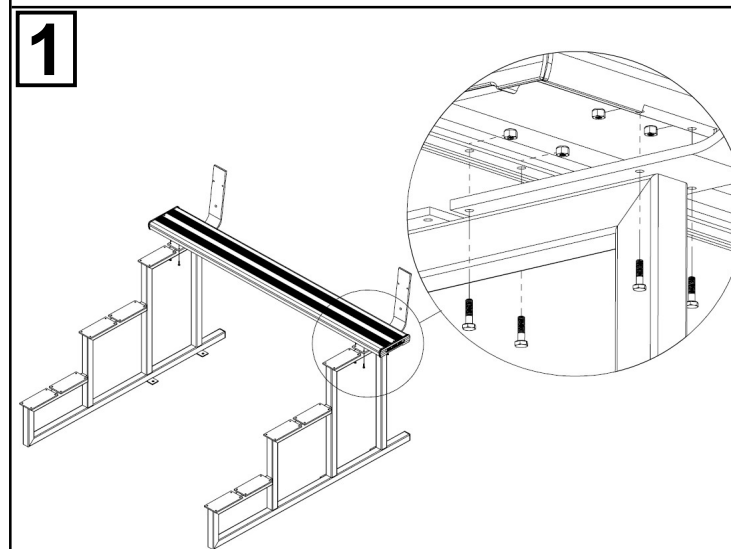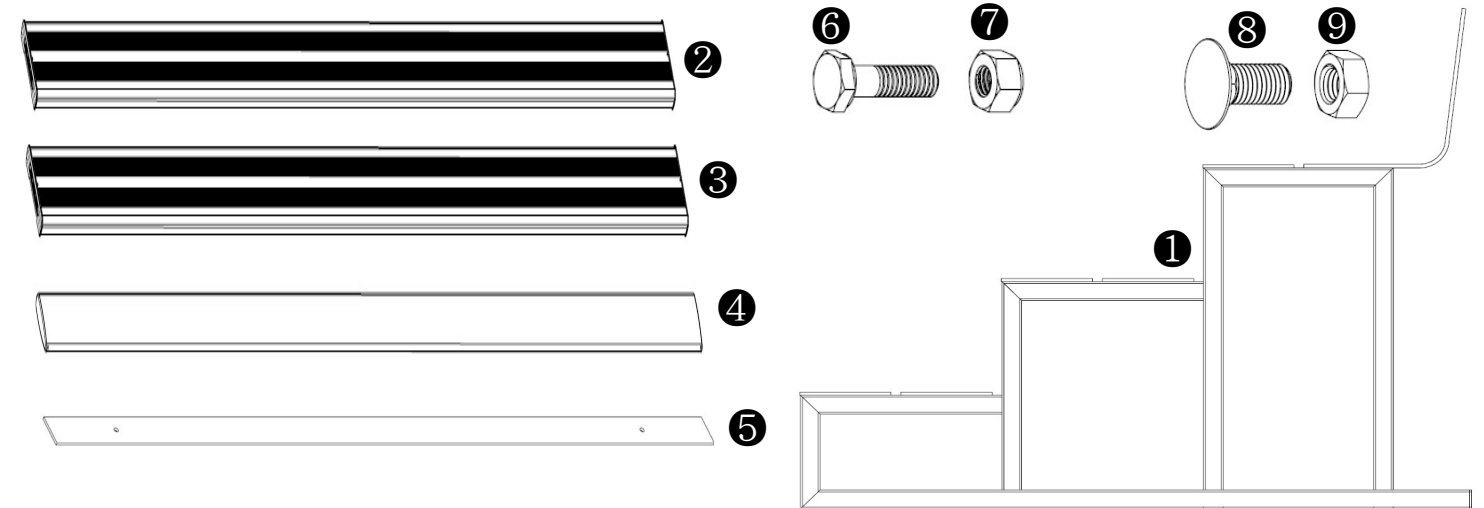


Attach plank 2 (with notch cut beneath) to two base frames 1 by using bolts 6 and nuts 7. **Note that all fixing lugs on base frames 1 face inwards.**

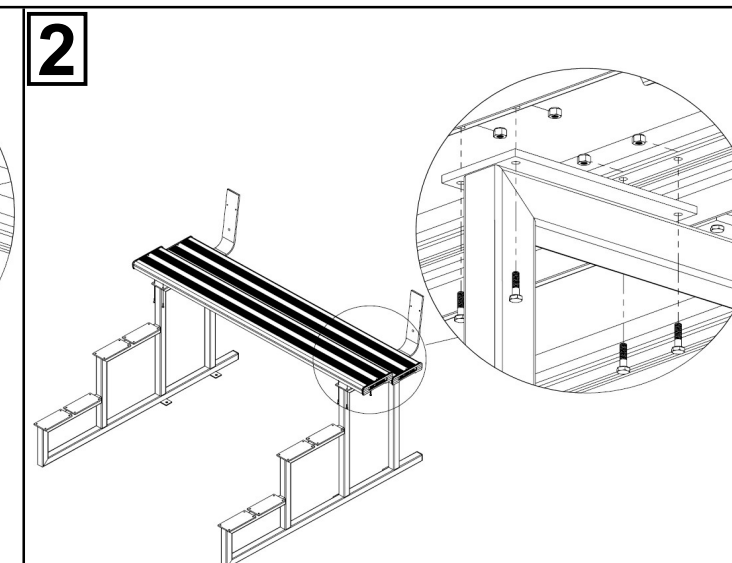


Attach plank 3 to the assembly in step 1 by using bolts 6 and nuts 7 as illustrated.

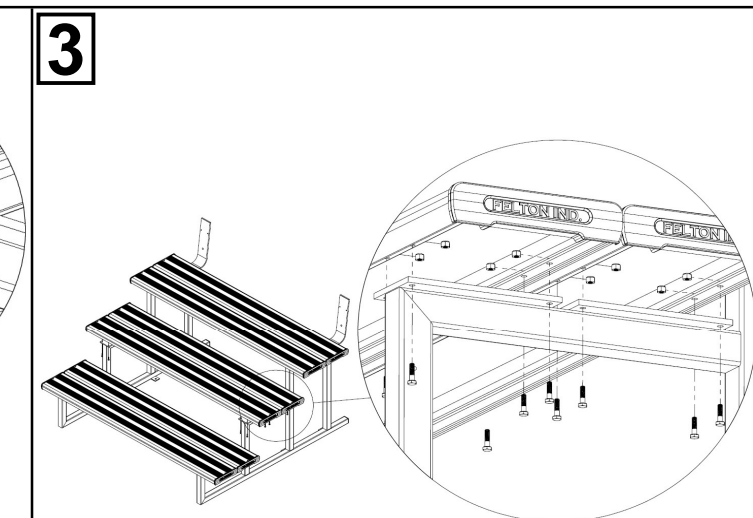


Repeat step 2 with four remaining planks 3 at lower positions on base frame 1.

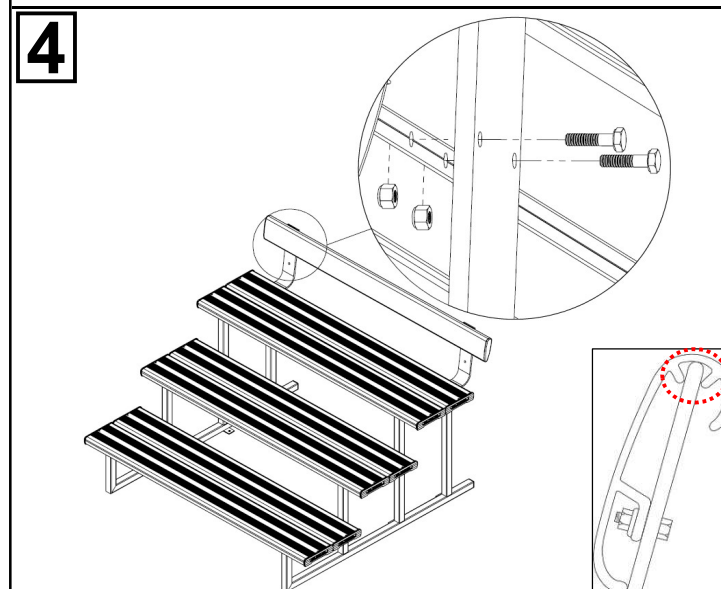

Install the backrest plank 4 onto frame fixing plates as illustrated. Fasten the backrest planks 4 with hexagonal bolts 6 and nuts 7. Ensure the fixing plates are installed in the right place on backrest plank.

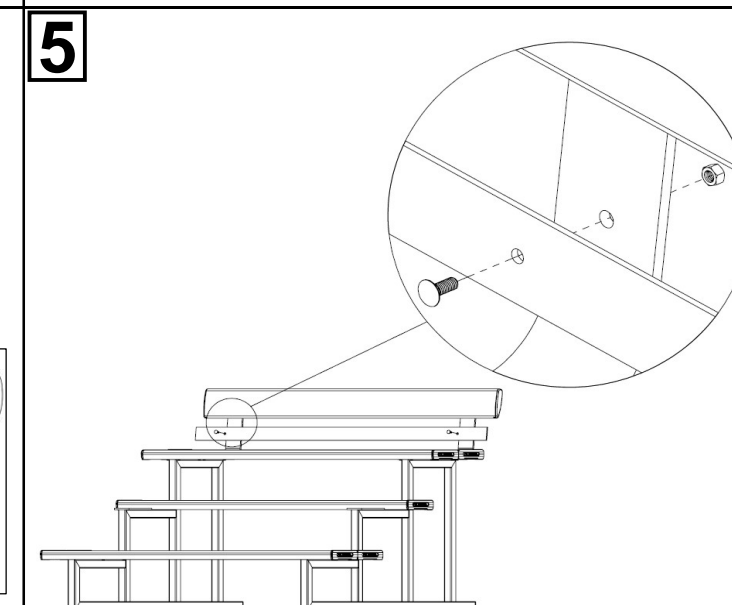

Attach the long flat bar 5 to fixing plates by using bolts 8 and nuts 9 as illustrated.

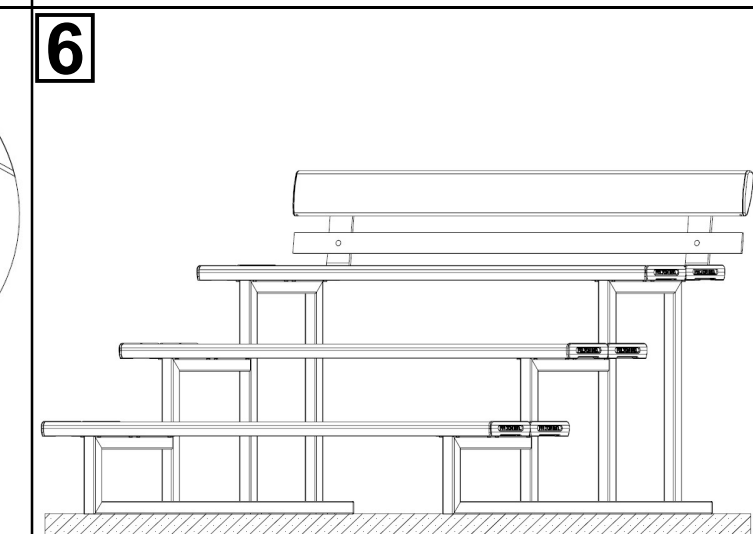

Tighten all hexagonal head bolts with spanners and appropriate tools. Then completely tighten the dynabolts to attach the whole assembly firmly to the ground.