ASSEMBLY INSTRUCTIONS

felton INDUSTRIES



THANK YOU

for choosing Felton Industries.


SORRENTO
FREE STANDING BENCH

Felton Industries Pty Ltd | ABN: 17 130 687 240

felton.net.au sales@felton.net.au
1800 834 016


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

NO.	NAME	QTY.
1	AVOCA BENCH ABOVE GROUND LEG SUPPORT	2
2	Cup Head Bolt - 0.375 x 2	12
3	AS-FLAT WASHER - 0.375	12
4	AS 1112 Nut - 0.375	12
5	AL PLATE 50x312/T10	1
6	Sorrento Square Alu Batten L1812	4

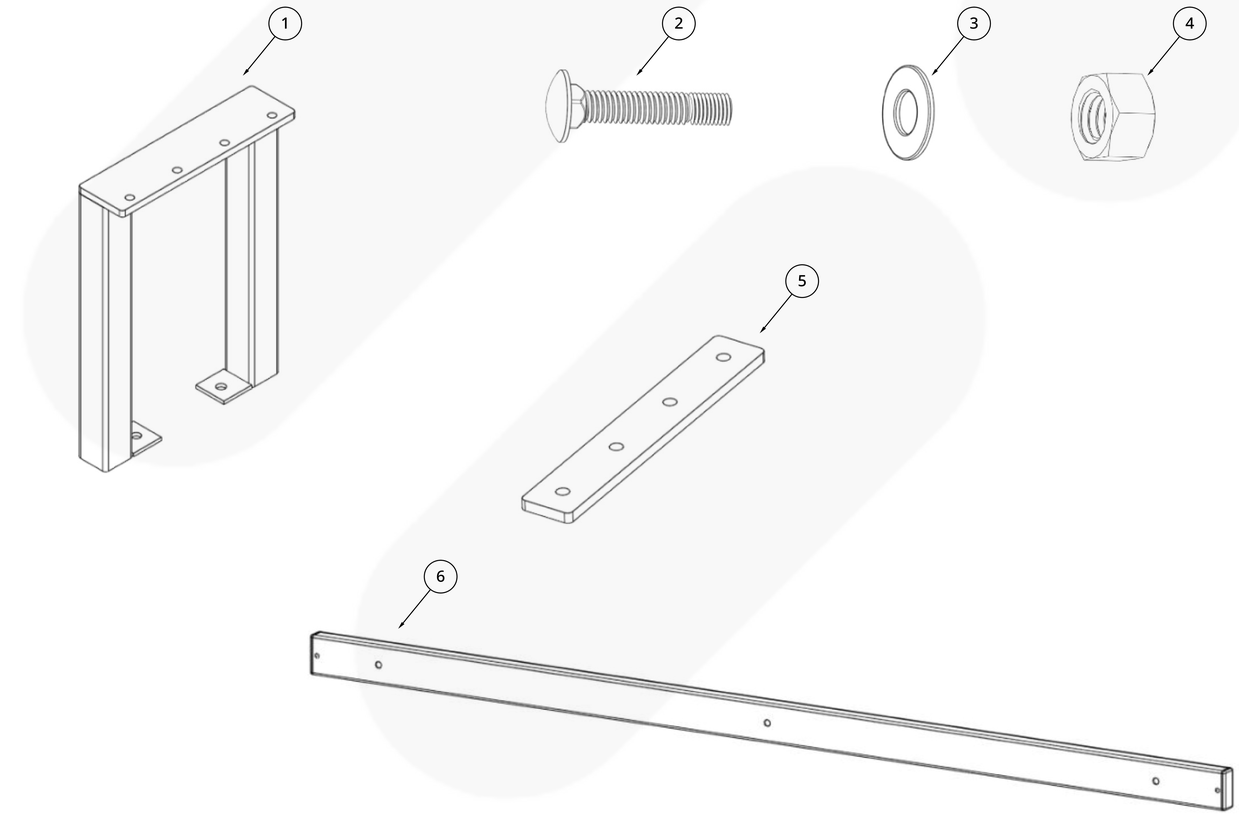


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

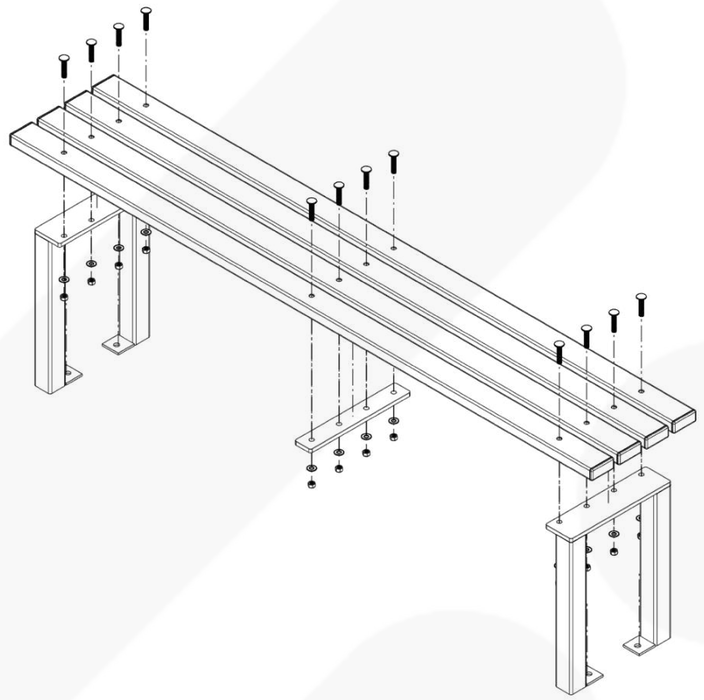

Attach the four square alu batten ❻ to the two ground leg support ❶ and middle plate ❺ by using bolts ❷, washers ❸ and nuts ❹ as illustrated.

2.

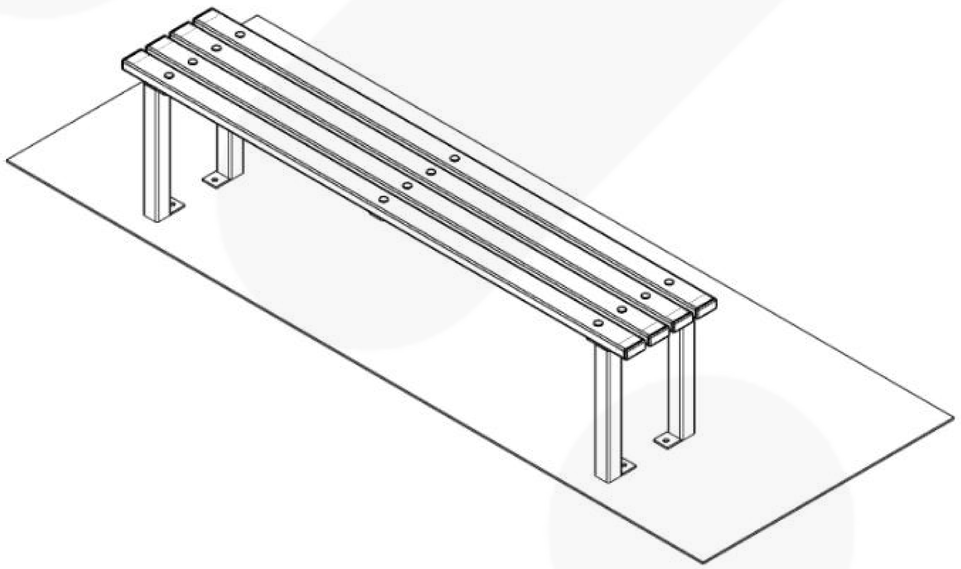

Tighten all bolts with appropriate tools. Then attach the whole assembly to the ground by using M12 dyna-bolts preferably, on each frame lug.