

ASSEMBLY INSTRUCTIONS


felton INDUSTRIES

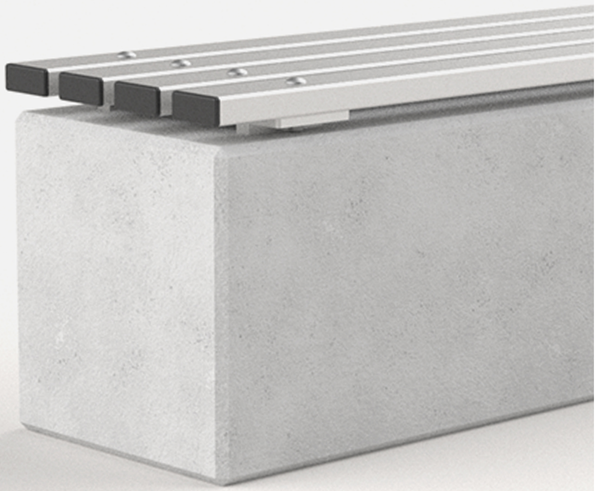



WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.


NO.	NAME	QTY.
1	Concrete Mount	3
2	Sorrento Square Alu Batten L1812	4
3	Cup Head Bolt - 0.375 x 2	12
4	AS-FLAT WASHER - 0.375	12
5	AS 1112 Nut - 0.375-1	12

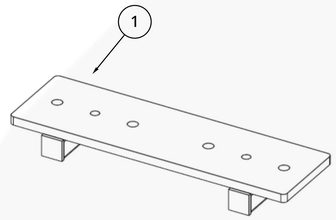

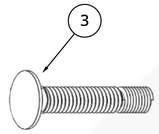

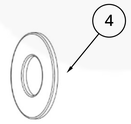

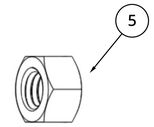

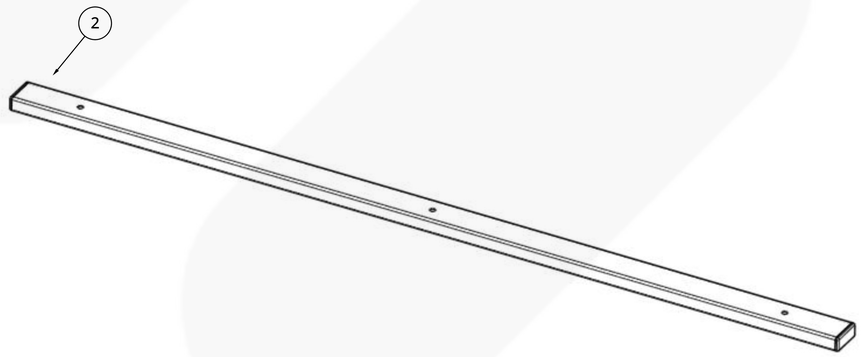

THANK YOU

for choosing Felton Industries.


SORRENTO BENCH
CONCRETE MOUNTED

Felton Industries Pty Ltd | ABN: 17 130 687 240

felton.net.au sales@felton.net.au
1800 834 016


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

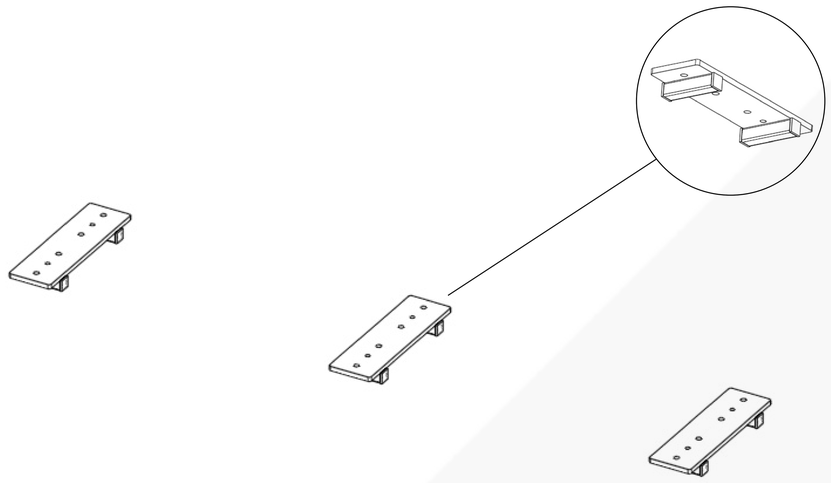


Position the three concrete mount ❶ as shown above, making sure square tube are positioned towards the ground.

2.

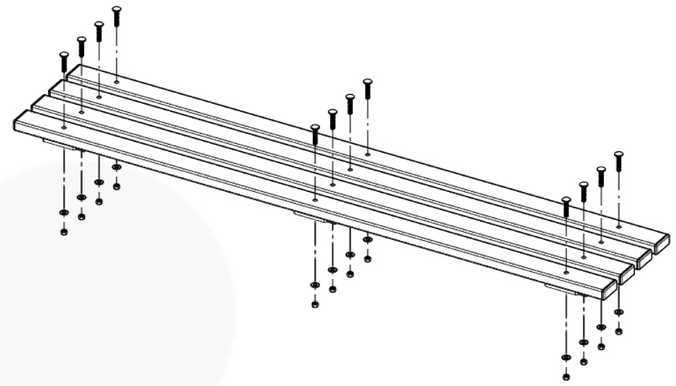

Line up the four square alu battens ❷ and align it with the screw holes of the concrete mount ❶. Then secure the battens with bolts ❸, washers ❹ and nuts ❺.

3.

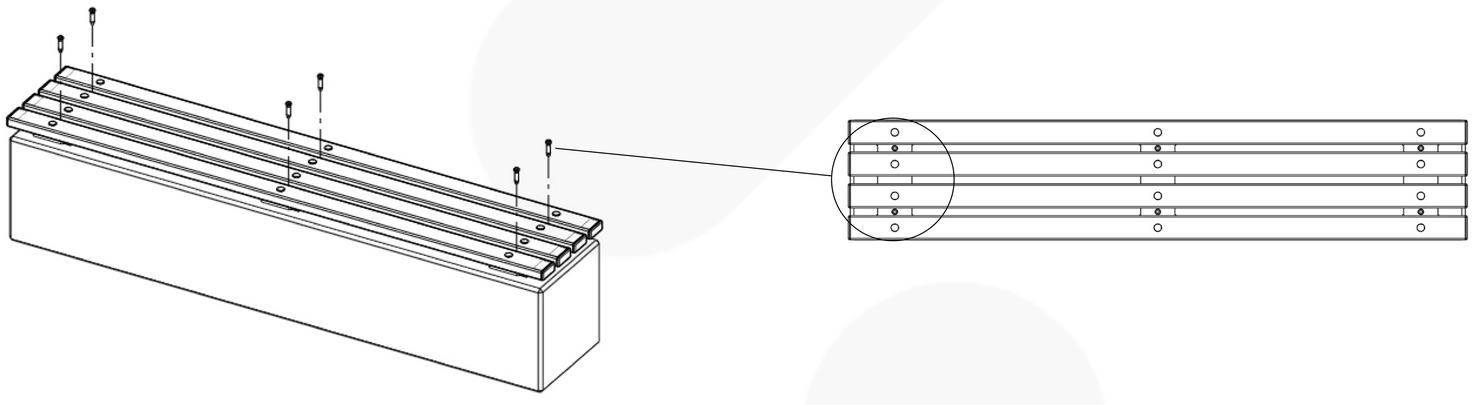

Tighten all screws completely before installing the seat. Bolt down seat using Dynabolts.