
ASSEMBLY INSTRUCTIONS

felton
INDUSTRIES

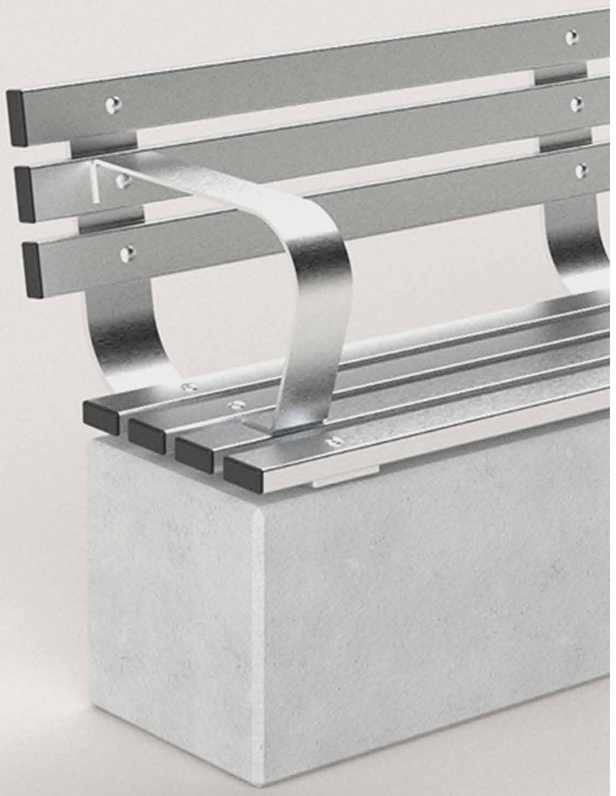

THANK YOU

for choosing Felton Industries.


SORRENTO SEAT W/ARMS
CONCRETE MOUNTED


Felton Industries Pty Ltd | ABN: 17 130 687 240


felton.net.au sales@felton.net.au
1800 834 016


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.


NO.	NAME	QTY.
1	Sorrento Concrete Seat Mount	3
2	Sorrento Square Alu Batten L1812	7
3	Custom Armrest - 80/T6	2
4	Cup Head Bolt - 0.375 x 2	17
5	AS-FLAT WASHER - 0.375	21
6	AS 1112 Nut - 0.375-1	21
7	Cup Head Bolt - 0.375 x 2.5	4

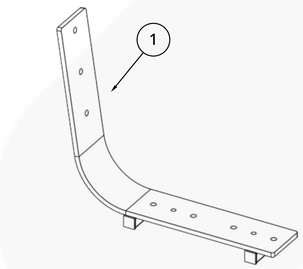


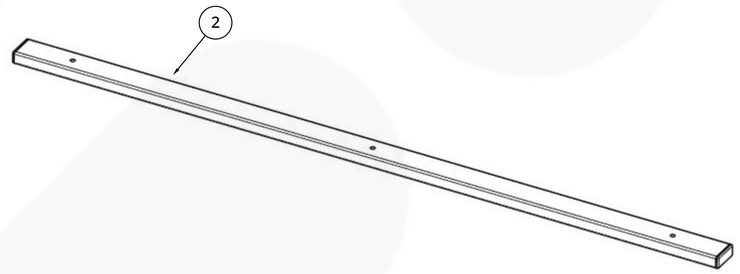


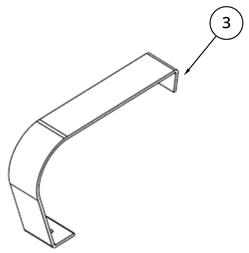

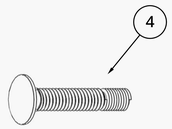






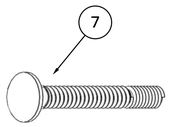


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

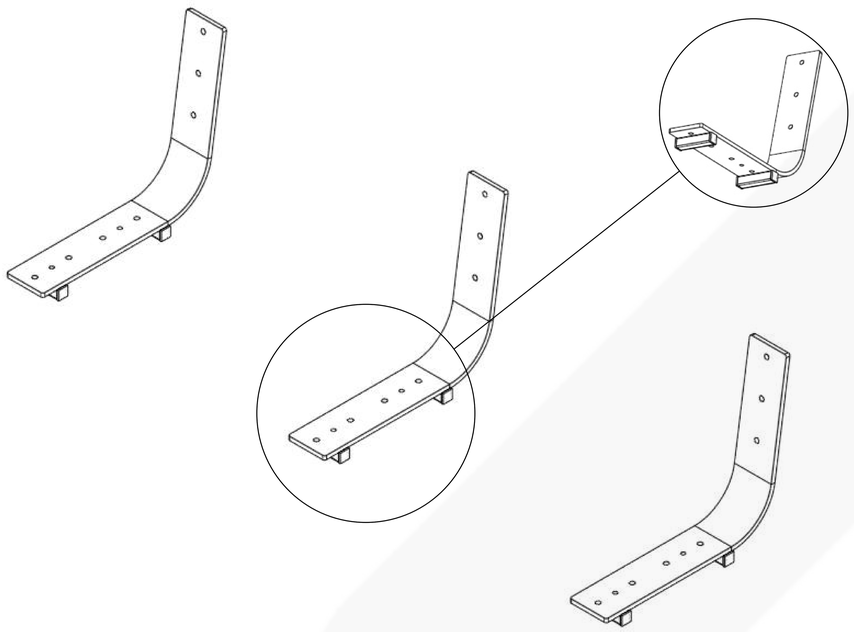


Position the three concrete seat mount ❶ as shown above, making sure square tube are positioned towards the ground.

2.

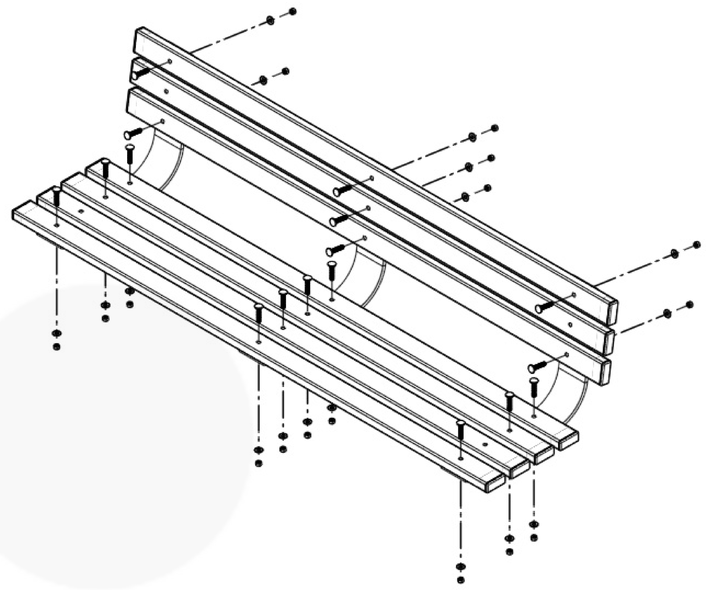


Attach seven square alu battens ❷ and align it with the screw holes of the concrete seat mount ❶. Then secure the battens with bolts ❹, washers ❺ and nuts ❻.

3.

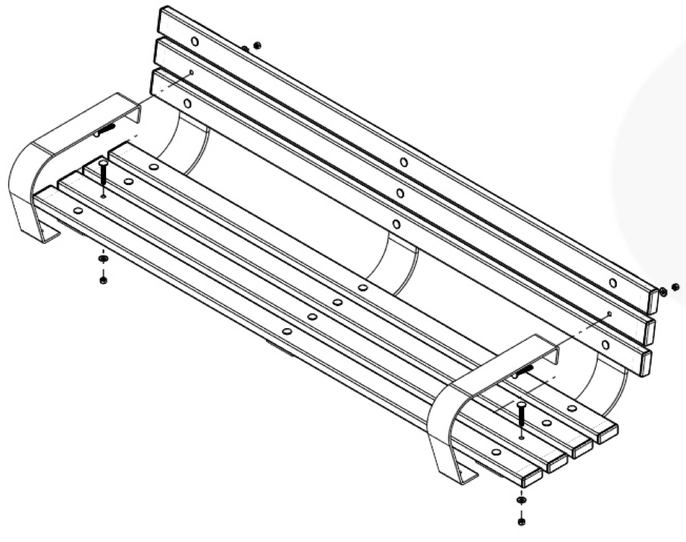

Insert the two arm rest ❸ into each side by using bolts❹, washers ❺ and nuts ❻ as illustrated.

4.

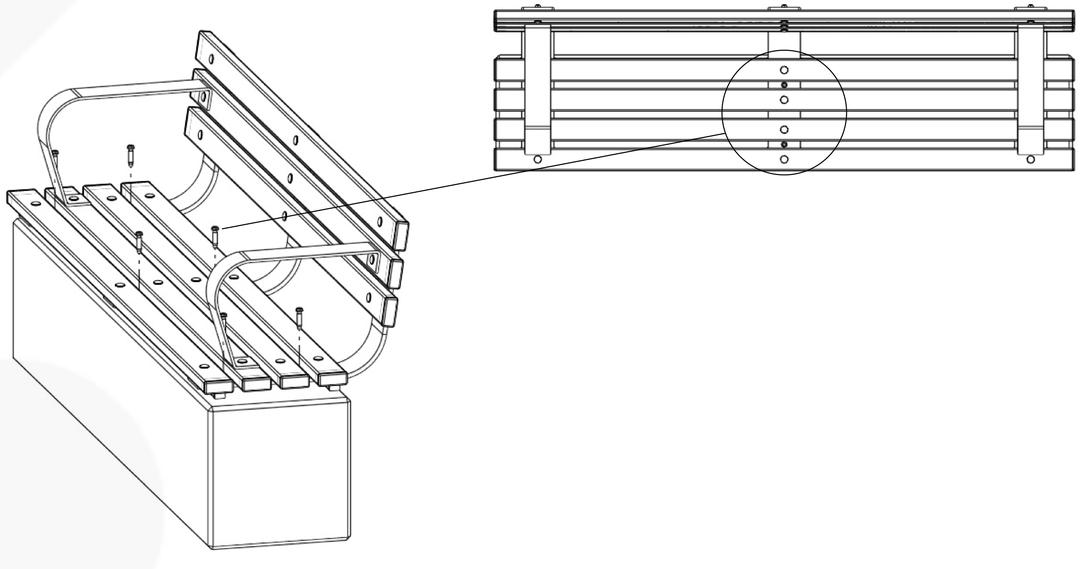

Tighten all screws completely before installing the seat. Bolt down seat using Dynabolts.