ASSEMBLY INSTRUCTIONS

felton INDUSTRIES



THANK YOU

for choosing Felton Industries.

Avoca Bin Surround
240 Litre


Felton Industries Pty Ltd | ABN: 17 130 687 240


felton.net.au sales@felton.net.au


1800 834 016

WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

NO.	NAME	QTY.
1	REAR PANEL SHEET METAL 240L	1
2	LEFT SIDE PANEL SHEETMETAL_240L	1
3	RIGHT SIDE PANEL SHEETMETAL_240L	1
4	FRONT DOOR SHEET METAL_VERTICAL SLAT 240L	1
5	TOP COVER SHEET METAL 240L	1
6	INNER COVER 240L	1
7	FELMB512_HINGE 80x60x1.6	2
8	socket countersunk head screw M6 x 16	12
9	ISO 4017 Screw - M6 x 16	16
10	AS 1112.1 Nut - M6	28
11	SOUTH-CO QUARTER TURN CAM LATCH	1

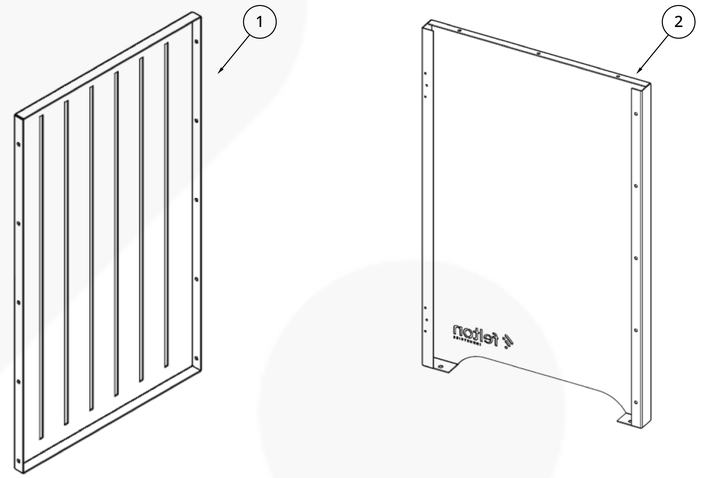


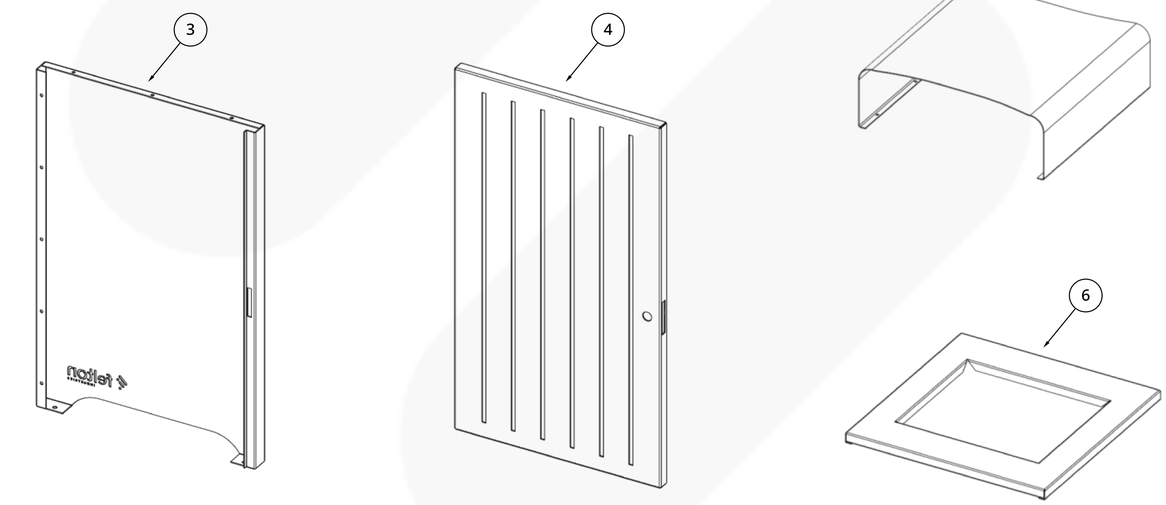

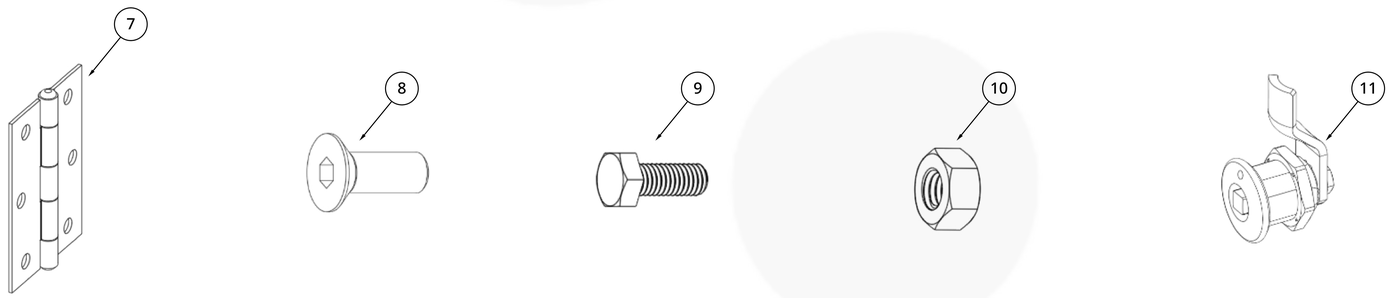


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

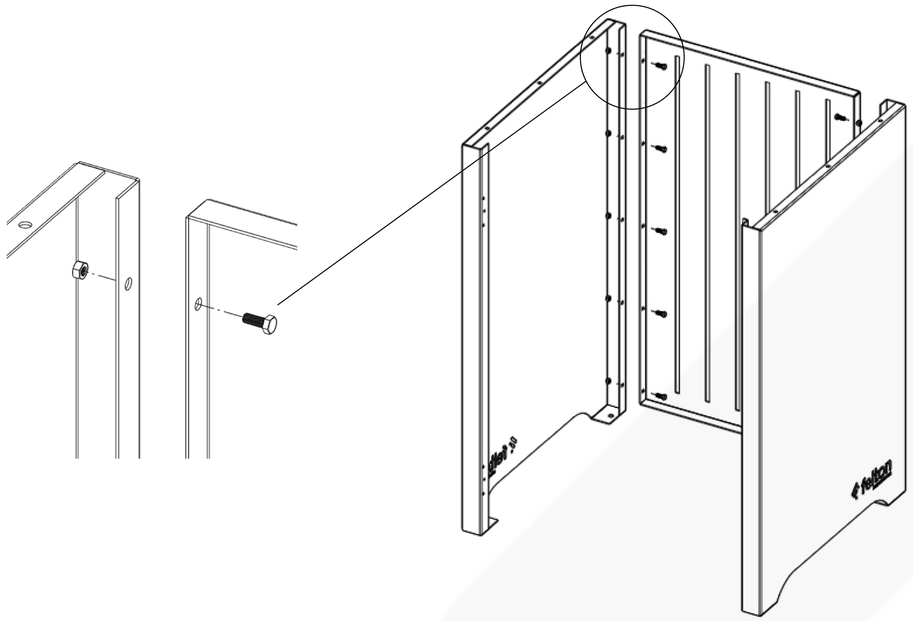


Attach the left side panel ❷ and the right side panel ❸ to the back panel ❶ by using screws ❾ and nuts ❿

2.

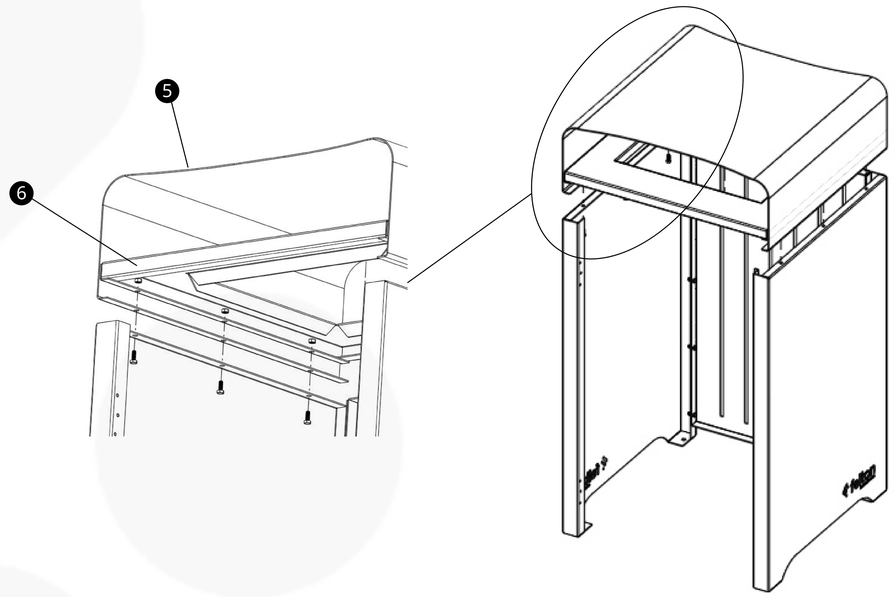


Attach the top cover ❺ first then the inner cover ❻ by using screws ❾ and nuts ❿ as illustrated.

3.

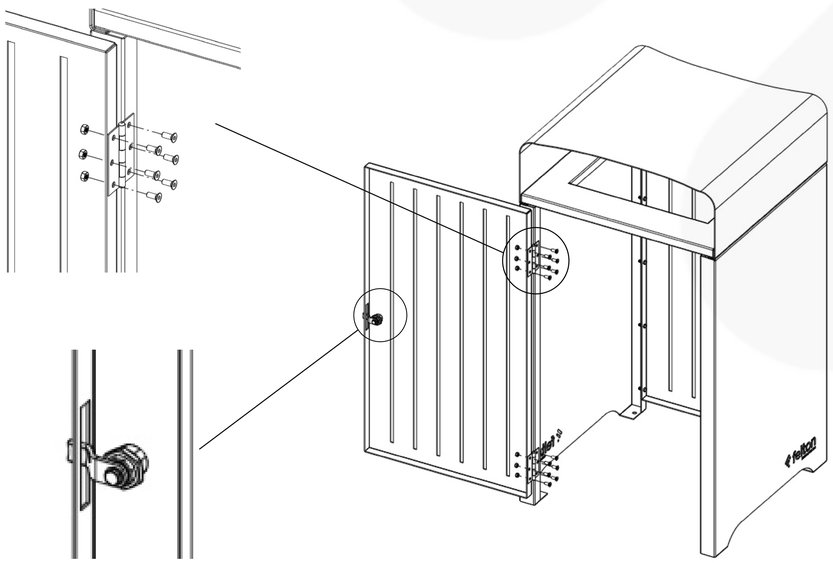

Attach the two hinges ❼ to the door panel ❹ and the left panel ❷ by using screws ❽ and nuts ❿ as illustrated. Then attach the lock ⓫ to the door panel ❹.

4.

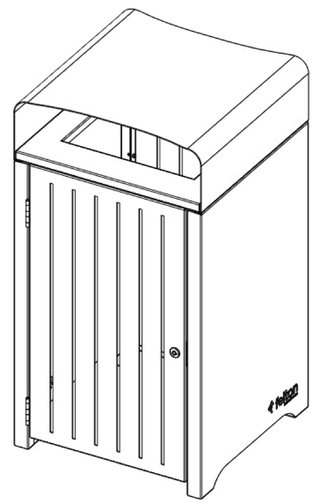

Tighten all screws with spanners and appropriate tools. Then fix the whole bin to the ground by using dyna-bolts preferably, on 4 mount plates.