ASSEMBLY INSTRUCTIONS

felton
INDUSTRIES



THANK YOU

for choosing Felton Industries.


SORRENTO SEAT
W/ ARMS ABOVE GROUND

Felton Industries Pty Ltd | ABN: 17 130 687 240

felton.net.au sales@felton.net.au
1800 834 016


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

NO.	NAME	QTY.
1	AVOCA SEAT AG SIDE SUPPORT-MAIN	2
2	Cup Head Bolt - 0.375 x 2	17
3	AS-FLAT WASHER - 0.375	21
4	AS 1112 Nut - 0.375	21
5	SORRENTO AL FOLDED PLATE 748x100x10	1
6	Square Alu Batten L2020	7
7	Custom Armrest - 80/T6	2
8	Cup Head Bolt - 0.375 x 2.5	4

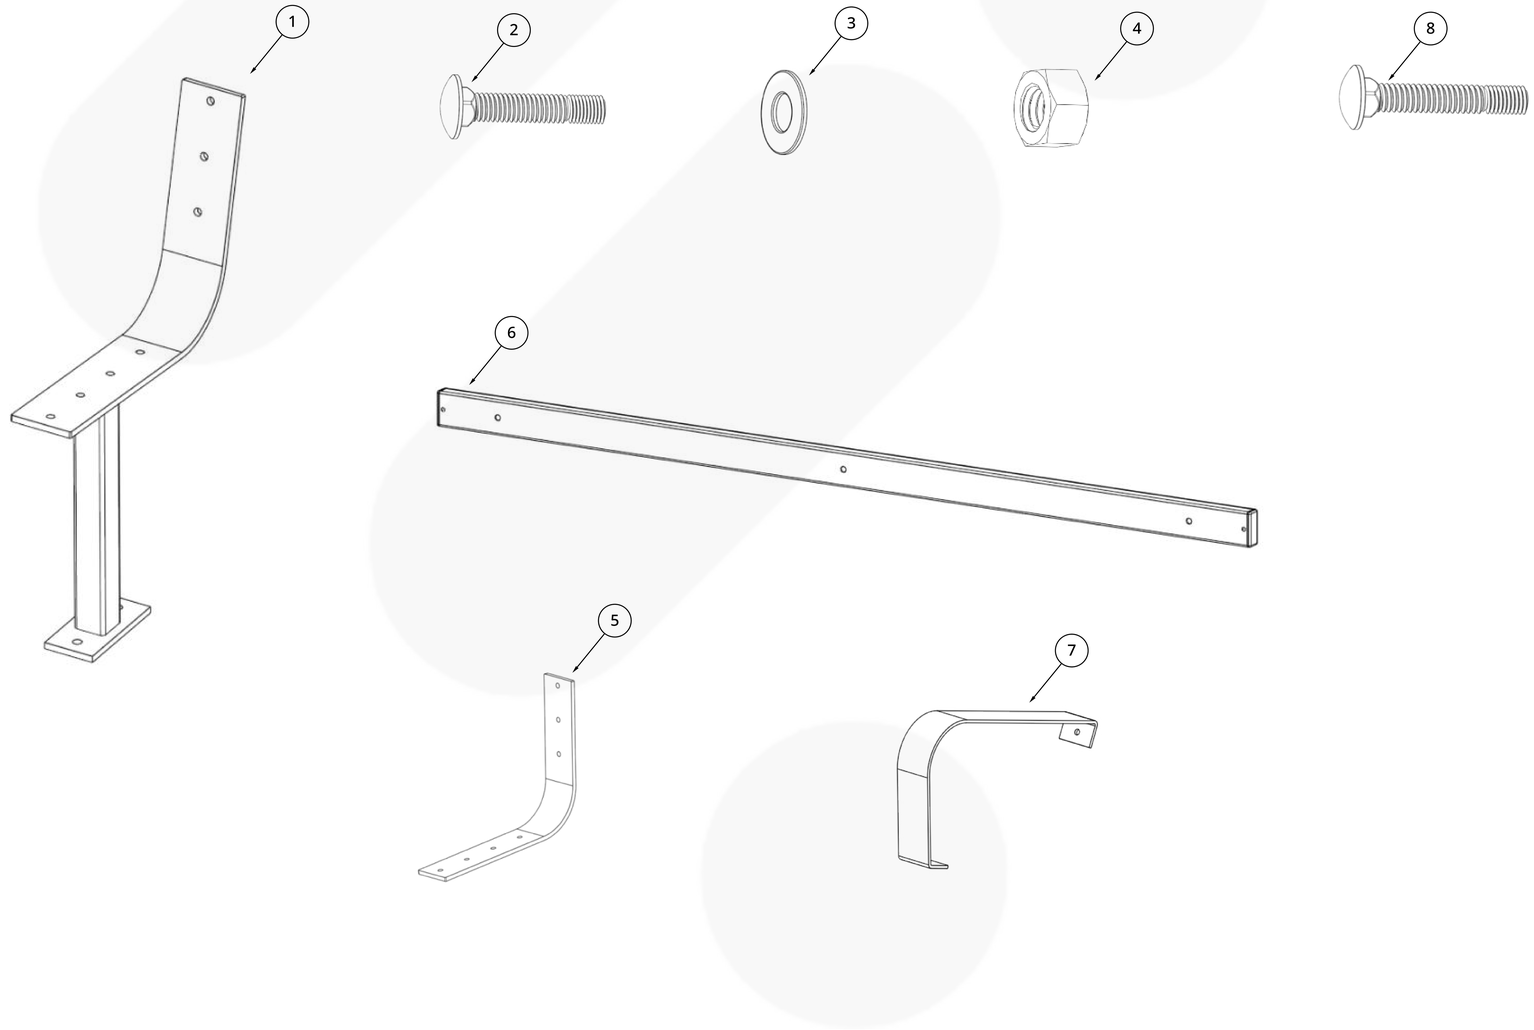


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

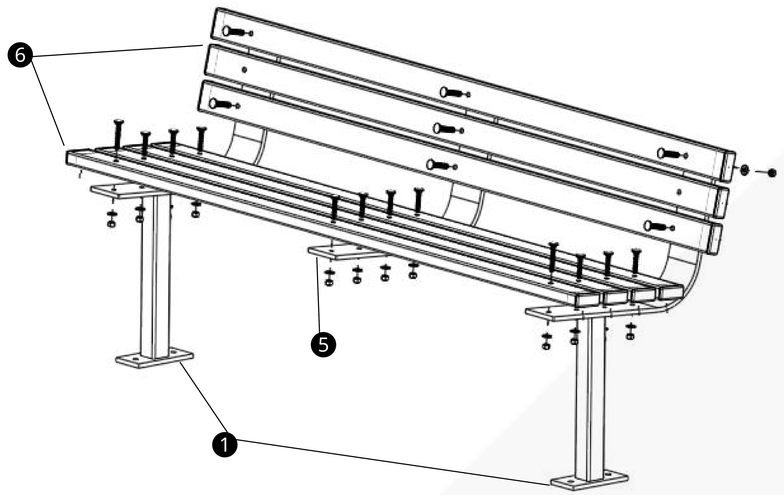


Attach the seven square alu batten ❻ to the two side support ❶ and middle folded plate ❺ by using bolts ❷, washers ❸ and nuts ❹ as illustrated.

2.

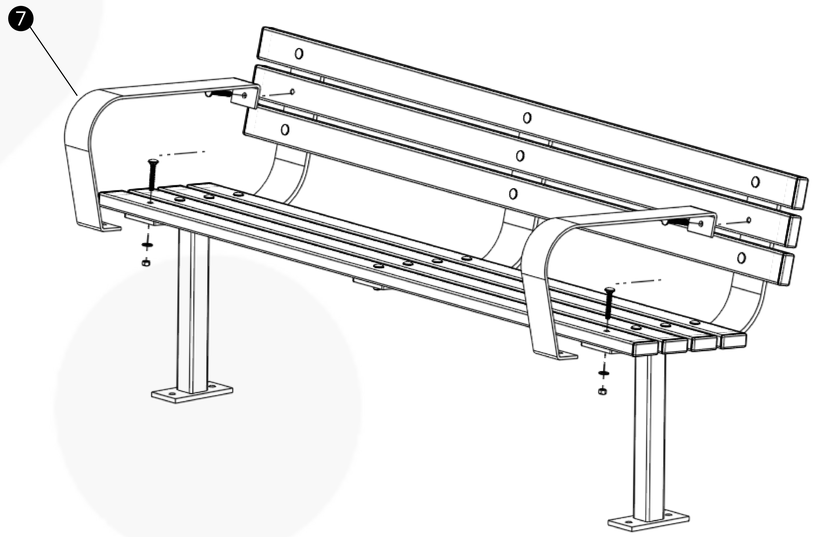

Insert the two arm rest ❼ into each side by using bolts ❽, washers ❸ and nuts ❹ as illustrated.

3.

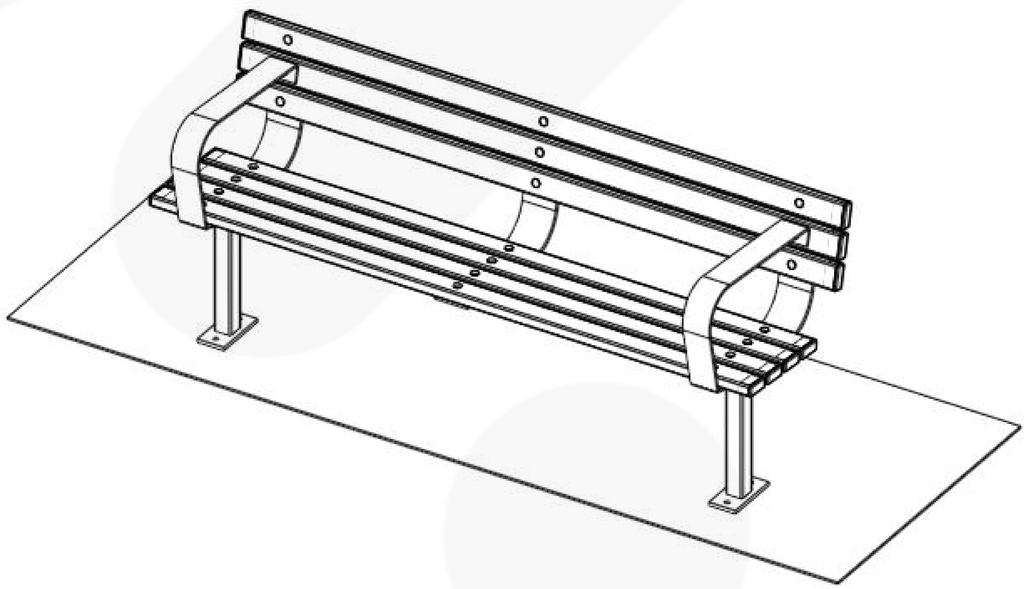

Tighten all bolts with appropriate tools. Then attach the whole assembly to the ground by using M12 dyna-bolts preferably, on each frame lug.