
ASSEMBLY INSTRUCTIONS

felton INDUSTRIES

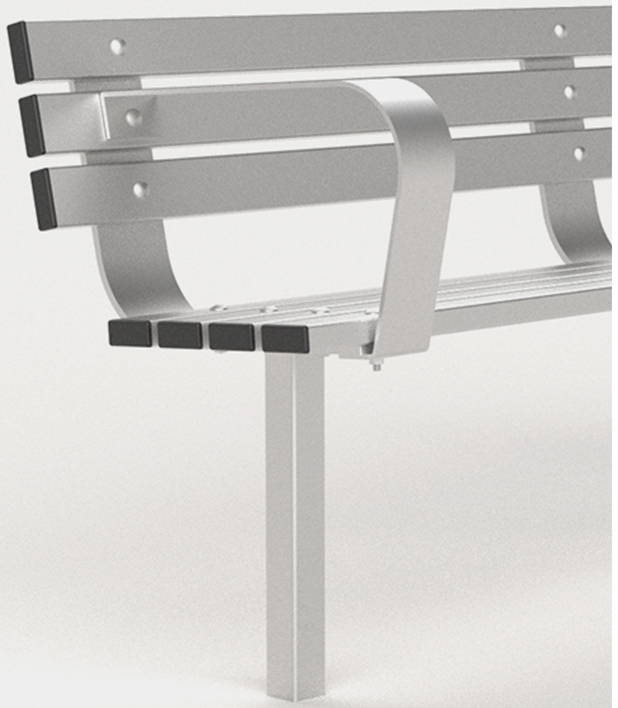

THANK YOU

for choosing Felton Industries.

SORRENTO SEAT
W/ ARMS IN GROUND


Felton Industries Pty Ltd | ABN: 17 130 687 240

felton.net.au sales@felton.net.au

1800 834 016


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

NO.	NAME	QTY.
1	AVOCA SEAT IG SIDE SUPPORT-MAIN	2
2	Cup Head Bolt - 0.375 x 2	17
3	AS-FLAT WASHER - 0.375	21
4	AS 1112 Nut - 0.375	21
5	SORRENTO AL FOLDED PLATE 748x100x10	1
6	Sorrento Square Alu Batten L1812	7
7	Custom Armrest - 80/T6	2
8	Cup Head Bolt - 0.375 x 2.5	4

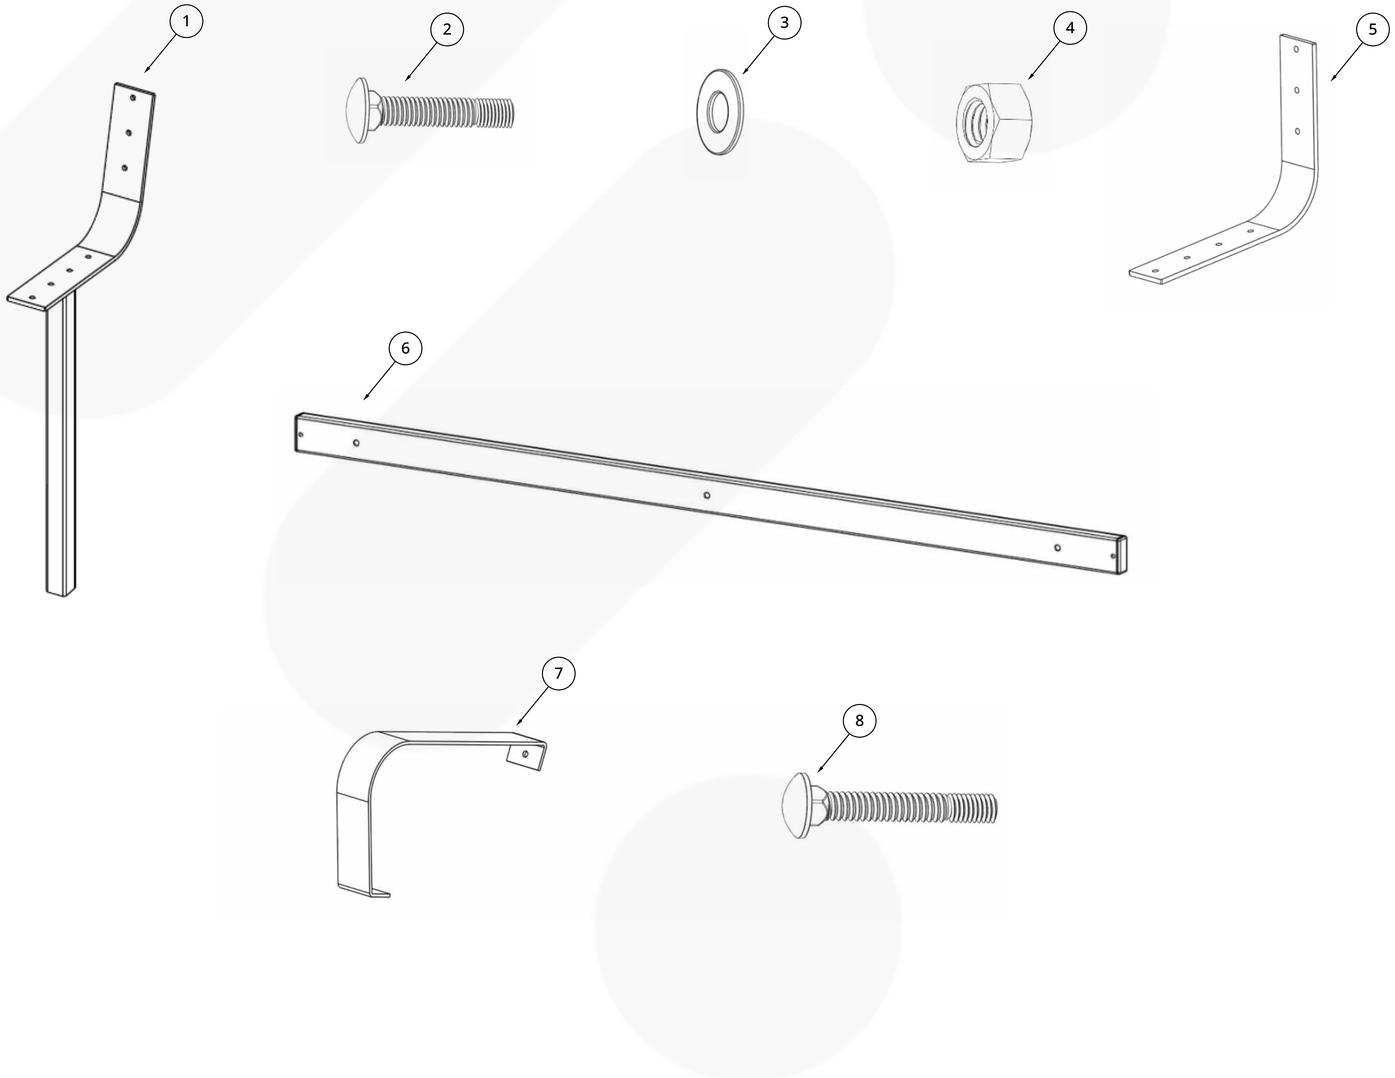


WARNING: This Assembly requires two or more people as lifting is involved. Please ensure bolts and nuts are only finger - tightened throughout assembly for flexibility in lining up components. Bolt and nuts should be securely tightened in place when instructed to do so. Please check all components are included before proceeding with the assembly.

1.

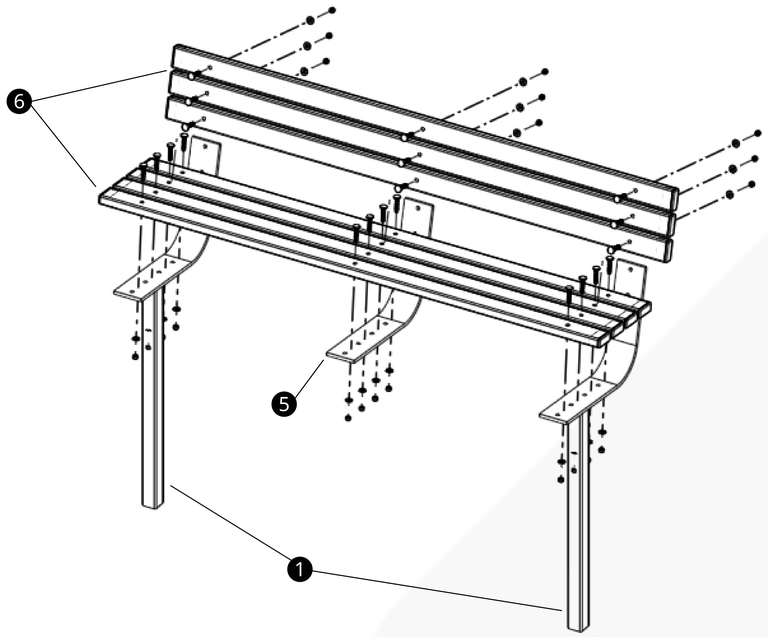


Attach the seven square alu batten ❻ to the two side support ❶ and middle folded plate ❺ by using bolts ❷, washers ❸ and nuts ❹ as illustrated.

2.

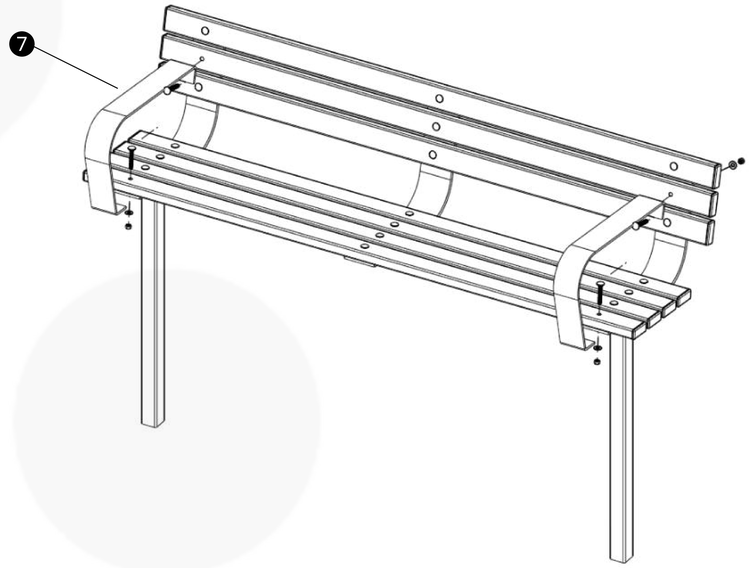


Insert the two arm rest ❼ into each side by using bolts ❽, washers ❸ and nuts ❹ as illustrated.

3.

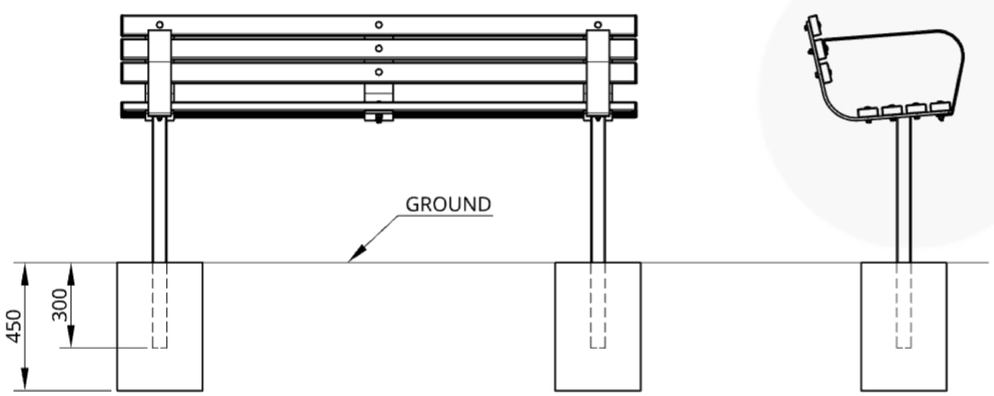

Embed the whole assembly to the concrete base min. 300mm. Refer to “Specification Drawing” for detailed engineering requirement.

4.

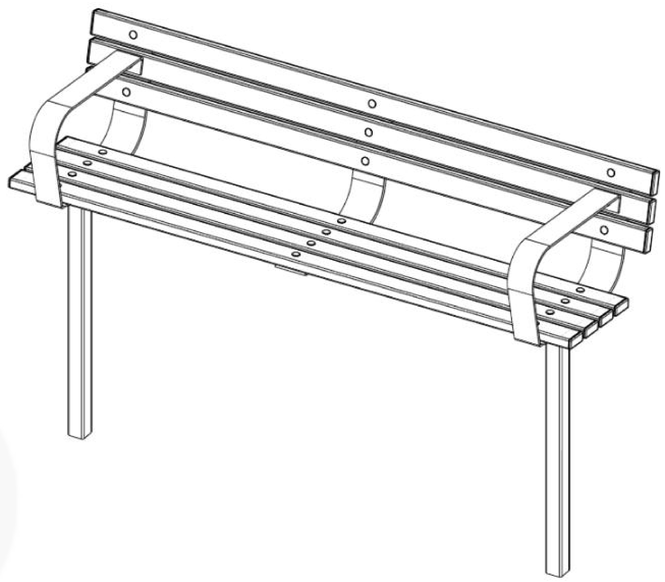

Tighten all bolts with spanners and appropriate tools.