



## WARNING: READ THE ASSEMBLING INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING THE ECO-TRENDED INTERACTIVE WHEELCHAIR SETTING.





Make sure to wear protective gloves and foot protection when installing and assembling this product. Unpack the unit and make sure all the components are included before proceeding. This activity requires two o more people as lifting is involved. Please ensure bolts are only finger-tightened during the assembling process for flexibility in lining up components. Securely tighten the bolts before anchoring the product to the ground.






**ECO-TRENDED INTERACTIVE** WHEELCHAIR SETTING (CODE No. FELISWS)

city agricult the boils before alichorning the product to the ground.			
ITEM	DESCRIPTION	QTY	
EW1	SHELTER FRAME/POST	2	
EW2	INNER FRAME/LEG	1	
EW3	1440 mm.—SEAT PLANK.	2	
EW4	2040mm.—TABLE PLANK.	3	
EW5	ROOF ASSEMBLY	2	[EW1] [EW2]
EW6	M6x25mm HEX HEAD BOLT	52	
EW7	M6 LOCKNUT	52	
EW8	M12x150mm HEX. BOLT	8	[EW3/4] [EW5]
EW9	M12 LOCKNUT	8	
EW10	M12 PLAIN WASHER	16	[EW6/8] [EW7/9] [EW10]

Thank you for purchasing our high quality products. The Eco-Trended Interactive Wheelchair Setting has been well manufactured with certified materials to achieve high reliabil $ity\ and\ minimum\ maintenance.\ It\ is\ our\ commitment\ to\ provide\ cost-effective\ solutions\ for\ outdoor\ applications.$ 

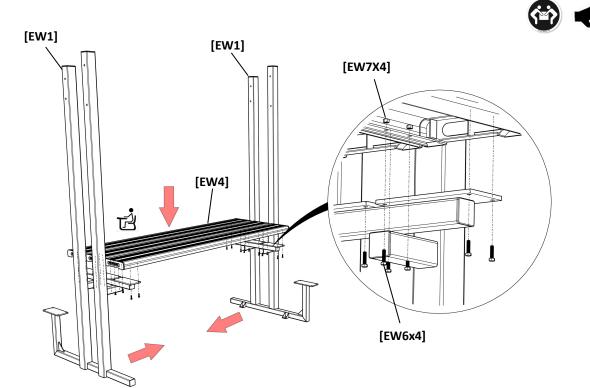


- A. Have the 2 shelter frames [EW1] up with bolt down lugs facing inwards.
- B. Secure the 3 Table planks [EW4] to the side frames [EW1] as shown , by using hex. head bolts [EW7] and locknuts[EW8] - finger tighten.







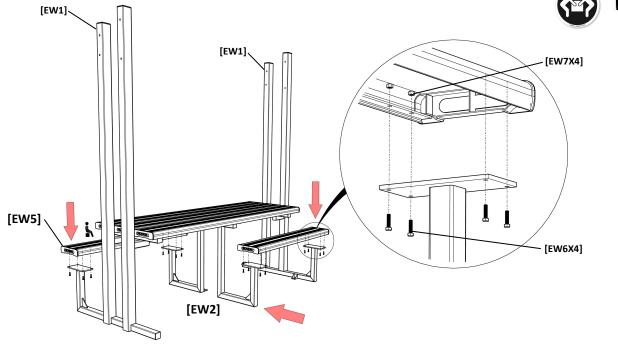

- A. Secure the inner frame [EW2], to the table planks, by using hex. head bolts [EW6] and locknuts [EW7]- Finger tighten.
- B. Install the two seating planks [EW5], onto both, shelter and inner frames/legs, by using hex. head bolts [EW6] and locknuts [EW7] Finger tighten.

